

Remove tappet adjusting hole cap and adjust of the valve clearance.

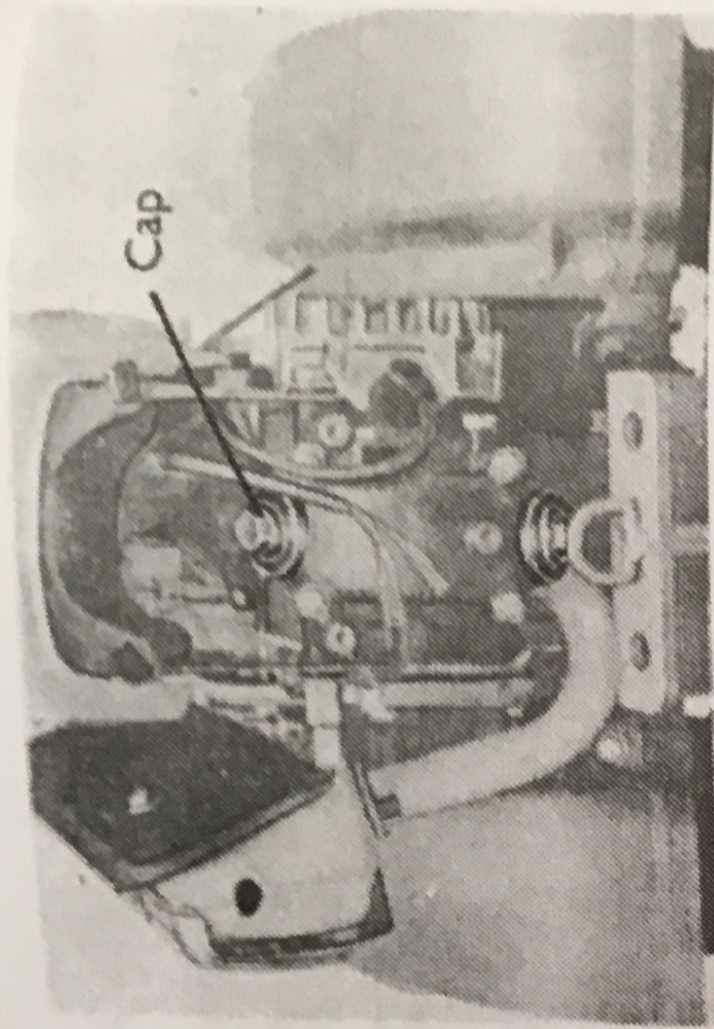


Fig. 59

When the rocker arm is pushing against the valve, make one rotation and adjust to the pressure of the upper dead point.

Loosen nut and move screw to adjust to a gap of 0.05 mm (0.002").

Screw { **Tightening** — gap is narrowed.
Loosening — gap is widened.

- Take care not to move or push the bolt while tightening the screw to prevent faulty adjustment.
- Use the thickness gauge to adjust the gap.

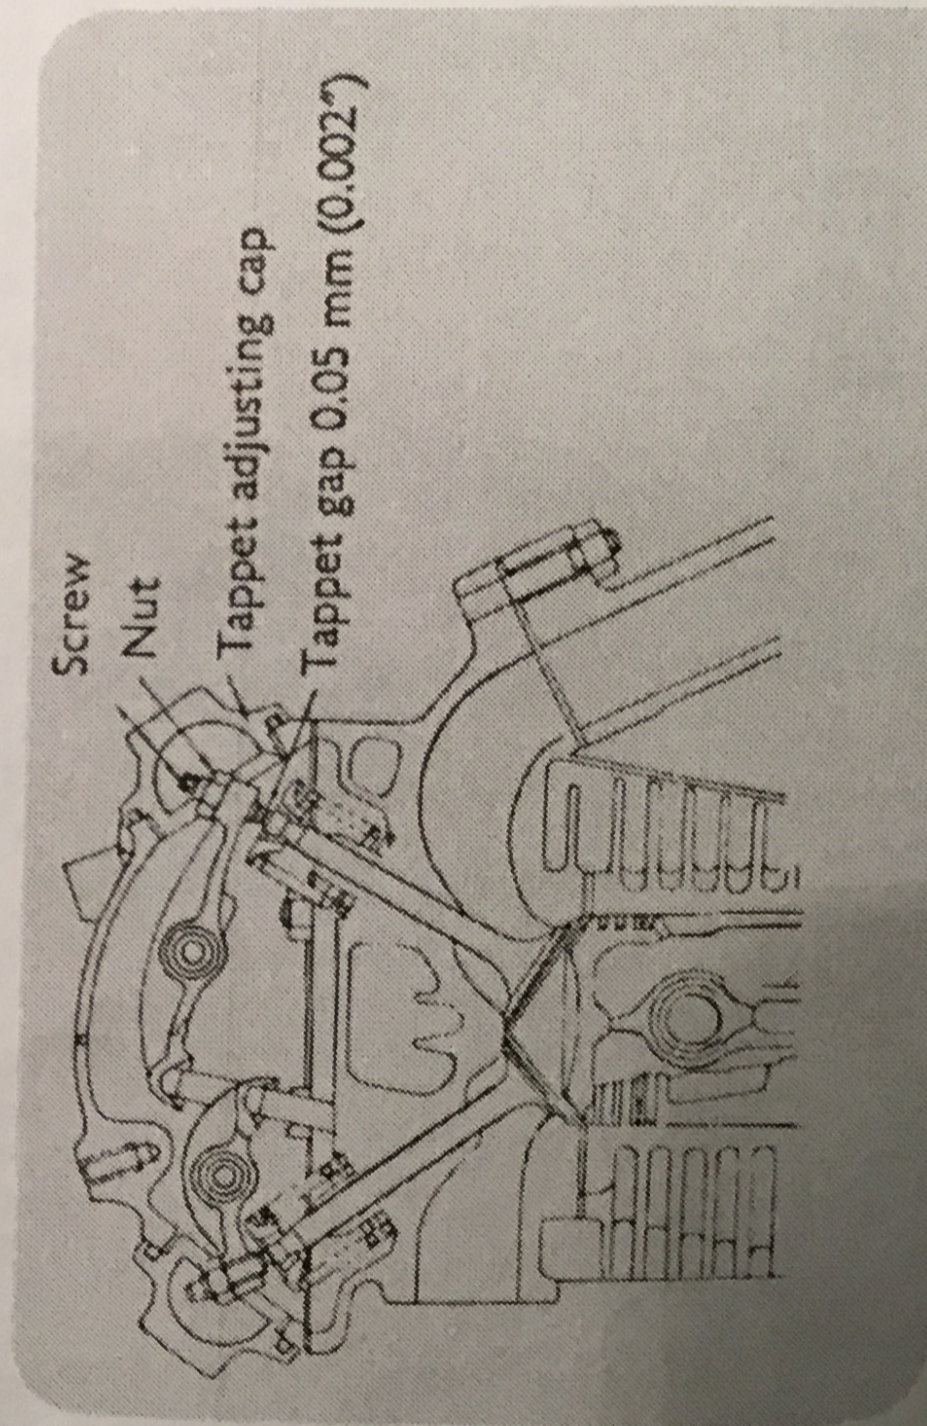


Fig. 60