

DeltaSol® CS Plus

RESOL®

Solar controller
Manual for the
specialised craftsman
Installation
Operation
Functions and options
Troubleshooting



11202673



The Internet portal for easy and secure access to
your system data – www.vbus.net

Thank you for buying this RESOL product.
Please read this manual carefully to get the best performance from this unit.
Please keep this manual carefully.

en

Manual

www.resol.com

Safety advice

Please pay attention to the following safety advice in order to avoid danger and damage to people and property.

Danger of electric shock:

- When carrying out works, the device must first of all be disconnected from the mains.
- It must be possible to disconnect the device from the mains at any time.
- Do not use the device if it is visibly damaged.

The device must not be used by children or persons with reduced physical, sensory or mental abilities or without any experience and knowledge. Make sure that children do not play with the device!

Only connect accessories authorised by the manufacturer to the device.

Make sure that the housing is properly closed before commissioning the device.

Target group

These instructions are exclusively addressed to authorised skilled personnel.

Only qualified electricians are allowed to carry out electrical works.

Initial commissioning must be effected by authorised skilled personnel.

Authorised skilled personnel are persons who have theoretical knowledge and experience with the installation, commissioning, operation, maintenance, etc. of electric/electronic devices and hydraulic systems and who have knowledge of relevant standards and directives.

Instructions

Attention must be paid to the valid local standards, regulations and directives!

Subject to technical change. Errors excepted.

Information about the product

Proper usage

The solar controller is designed for electronically controlling standard solar thermal systems in compliance with the technical data specified in this manual.

Any use beyond this is considered improper.

Proper usage also includes compliance with the specifications given in this manual.

Improper use excludes all liability claims.



Note

Strong electromagnetic fields can impair the function of the device.

- ➔ Make sure the device as well as the system are not exposed to strong electromagnetic fields.

EU Declaration of conformity

The product complies with the relevant directives and is therefore labelled with the CE mark. The Declaration of Conformity is available upon request, please contact the manufacturer.



Scope of delivery

The scope of delivery of this product is indicated on the packaging label.

Storage and transport

Store the product at an ambient temperature of 0 ... 40 °C and in dry interior rooms only.

Transport the product in its original packaging only.

Cleaning

Clean the product with a dry cloth. Do not use aggressive cleaning fluids.

Decommissioning

1. Disconnect the device from the power supply.
2. Dismount the device.

Disposal

- Dispose of the packaging in an environmentally sound manner.
- At the end of its working life, the product must not be disposed of as urban waste. Old appliances must be disposed of by an authorised body in an environmentally sound manner. Upon request we will take back your old appliances bought from us and guarantee an environmentally sound disposal of the devices.



Description of symbols

Warnings are indicated with a warning symbol!

Signal words describe the danger that may occur, when it is not avoided.

WARNING means that injury, possibly life-threatening injury, can occur.



→ It is indicated how to avoid the danger described.

ATTENTION means that damage to the appliance can occur.



→ It is indicated how to avoid the danger described.



Note

Notes are indicated with an information symbol.

- Texts marked with an arrow indicate one single instruction step to be carried out
- 1. Texts marked with numbers indicate several successive instruction steps to be carried out.

The DeltaSol® CS Plus has been especially developed for the speed control of high-efficiency pumps in standard solar and heating systems.

It is equipped with two PWM outputs and an additional input for a VFD Grundfos Direct Sensor™ that enables a precise heat quantity measurement.


Contents

1	Overview	5
2	Installation	6
2.1	Mounting	6
2.2	Electrical connection	7
2.3	VFD Grundfos Direct Sensor™	8
2.4	PWM outputs.....	8
2.5	Data communication / Bus	8
2.6	System overview.....	9
2.7	Systems.....	10
3	Operation and function	48
3.1	Buttons	48
4	System-Monitoring-Display	48
4.1	Flashing codes	49
5	Commissioning	50
6	Channel overview	52
6.1	Display channels.....	52
6.2	Adjustment channels	55
7	Troubleshooting.....	66
8	Index	69

1 Overview

- Especially designed for the speed control of high-efficiency pumps
- 1 input for a VFD Grundfos Direct Sensor™
- System-Monitoring-Display
- Up to 4 Pt1000 temperature sensors
- 2 semiconductor relays for pump speed control
- HE pump control
- Heat quantity measurement
- Commissioning menu
- 10 basic systems to choose from
- Function control
- Optional thermal disinfection function
- Drainback option
- Unit °F and °C selectable

Dimensions and minimum distances

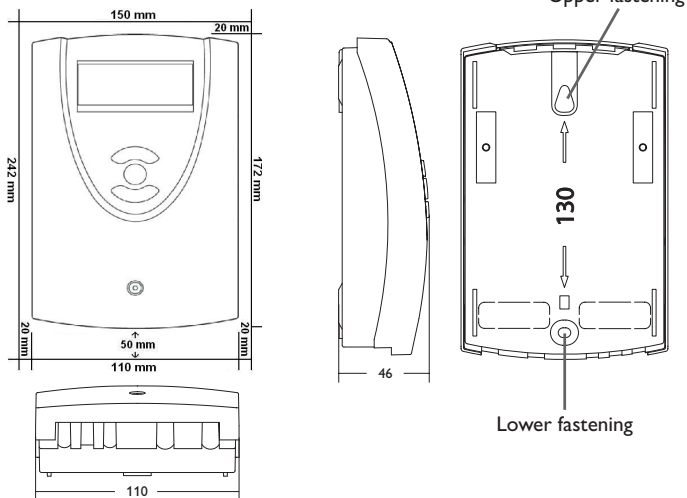

Technical data

Inputs: 4 Pt1000 temperature sensors, 1 VFD Grundfos Direct Sensor™

Outputs: 2 semiconductor relays, 2 PWM outputs

PWM frequency: 512 Hz

PWM voltage: 10.5 V

Switching capacity: 1 (1) A 240 V~ (semiconductor relay)

Total switching capacity: 2 A 240 V~

Power supply: 100–240 V~ (50–60 Hz)

Supply connection: type X attachment

Standby: 0.64 W

Temperature controls class: I

Energy efficiency [%]: 1

Mode of operation: type 1.C.Y action

Rated impulse voltage: 2.5 kV

Data interface: VBus®

VBus® current supply: 35 mA

Functions: function control, operating hours counter, tube collector function, thermostat function, speed control and heat quantity measurement

Housing: plastic, PC-ABS and PMMA

Mounting: wall mounting, mounting into patch panels is possible

Indication / Display: System-Monitoring-Display for visualisation of systems, 16-segment and 7-segment display, 8 symbols for indication of system status

Operation: 3 buttons

Ingress protection: IP 20/EN 60529

Protection class: I

Ambient temperature: 0 ... 40 °C

Pollution degree: 2

Fuse: T2A

Maximum altitude: 2000 m above MSL

Dimensions: 172 x 110 x 46 mm

2 Installation

2.1 Mounting

WARNING! Electric shock!



Upon opening the housing, live parts are exposed!

→ **Always disconnect the device from power supply before opening the housing!**



Note

Strong electromagnetic fields can impair the function of the device.

→ Make sure the device as well as the system are not exposed to strong electromagnetic fields.


The unit must only be located in dry interior rooms.

If the device is not equipped with a mains connection cable and a plug, the device must additionally be supplied from a double pole switch with contact gap of at least 3 mm.

Please pay attention to separate routing of sensor cables and mains cables.

In order to mount the device to the wall, carry out the following steps:

1. Unscrew the crosshead screw from the cover and remove it along with the cover from the housing.
2. Mark the upper fastening point on the wall. Drill and fasten the enclosed wall plug and screw leaving the head protruding.
3. Hang the housing from the upper fastening point and mark the lower fastening point (centres 130 mm).
4. Insert lower wall plug.
5. Fasten the housing to the wall with the lower fastening screw and tighten.
6. Carry out the electrical wiring in accordance with the terminal allocation (see chapter 2.2).
7. Put the cover on the housing.
8. Attach with the fastening screw.

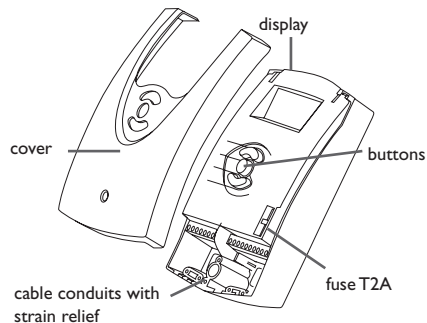

2.2 Electrical connection

WARNING! Electric shock!



Upon opening the housing, live parts are exposed!

→ Always disconnect the device from power supply before opening the housing!

ATTENTION! ESD damage!



Electrostatic discharge can lead to damage to electronic components!

→ Take care to discharge properly before touching the inside of the device!



Note

Connecting the device to the power supply must always be the last step of the installation!



Note

The mains connection must be carried out with the common ground of the building to which the pipework of the solar circuit is connected.



Note

The pump speed must be set to 100% when auxiliary relays or valves are connected.



Note


It must be possible to disconnect the device from the mains at any time.

→ Install the mains plug such that it is accessible at any time.

→ If this is not possible, install a switch that can be accessed.

If the mains cable is damaged, it must be replaced by a special connection cable which is available from the manufacturer or its customer service.

Do not use the device if it is visibly damaged!

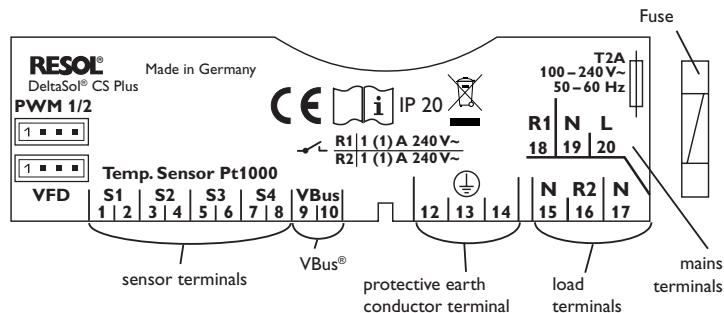

The power supply of the device must be 100–240 V~ (50–60 Hz). Attach flexible cables to the housing with the enclosed strain relief and the corresponding screws. The controller is equipped with 2 semiconductor relays to which **loads** such as pumps, valves, etc. can be connected:

Relay 1

18 = Conductor R1

17 = Neutral conductor N

13 = Protective earth conductor ⊕

Relay 2

16 = Conductor R2

15 = Neutral conductor N

14 = Protective earth conductor ⊕

The **mains connection** is at the following terminals:

19 = Neutral conductor N

20 = Conductor L

12 = Protective earth conductor ⊕

Connect the **temperature sensors** (S1 to S4) to the corresponding terminals with either polarity:

1/2 = Sensor 1 (e.g. collector sensor 1)

3/4 = Sensor 2 (e.g. store sensor 1)

5/6 = Sensor 3 (e.g. store sensor top)

7/8 = Sensor 4 (e.g. return sensor)

The cables carry low voltage and must not run together in a cable conduit with cables carrying a voltage higher than 50 V (please pay attention to the valid local regulations). The cable lengths depend on the cross sectional area.

Example: up to 100 m at 1.5 mm², up to 50 m at 0.75 mm². The cables can be extended with a two-wire cable.

2.3 VFD Grundfos Direct Sensor™


The controller is equipped with 1 input for a digital VFD Grundfos Direct Sensor™ for measuring the flow rate and the temperature. Connection is made at the VFD terminal.

2.4 PWM outputs

Speed control of a HE pump is possible via a PWM signal. The pump has to be connected to the relay as well as to one of the PWM outputs of the controller. Power is supplied to the HE pump by switching the corresponding relay on or off.

The terminals marked **PWM 1/2** are control outputs for pumps with PWM control input.


- PWM 1/2**
- 1 = PWM output 1, control signal
 - 2 = PWM output 1, GND
 - 3 = PWM output 2, GND
 - 4 = PWM output 2, control signal

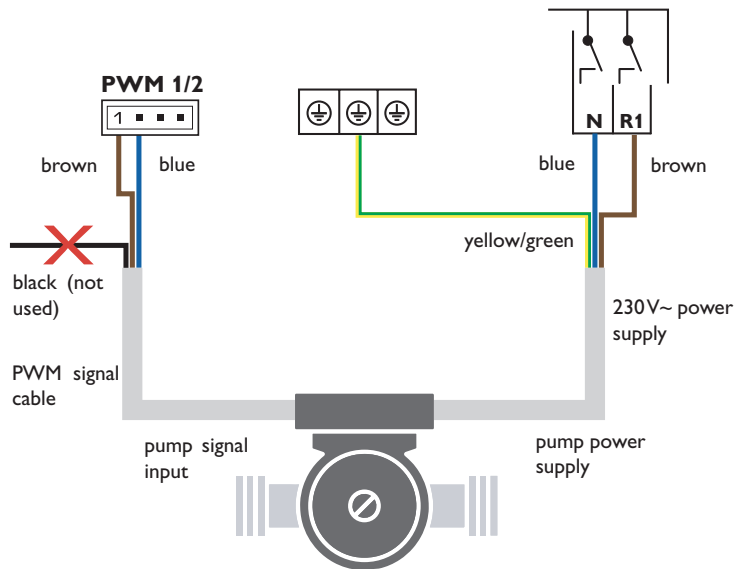


2.5 Data communication/Bus

The controller is equipped with the **VBus®** for data transfer and energy supply to external modules. The connection is to be carried out at the terminals marked **VBus** (either polarity).


One or more **VBus®** modules can be connected via this data bus.

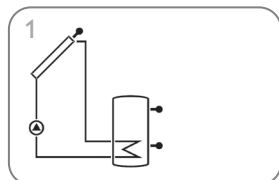


Standard solar system (page 10)

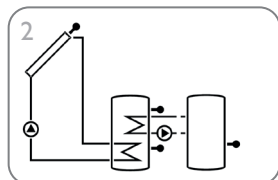


Solar system with heat exchange (page 13)

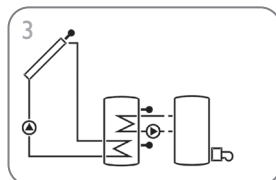


Solar system with backup heating (page 19)

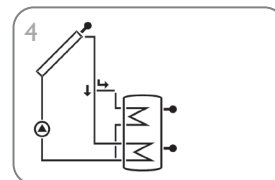


Solar system with store loading in layers (page 24)

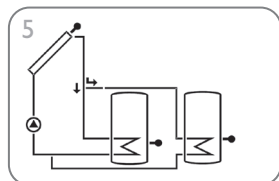


Solar system with 2 stores and valve logic (page 27)

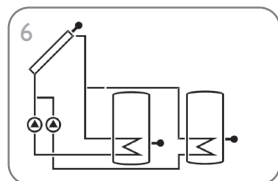


Solar system with 2 stores and pump logic (page 30)

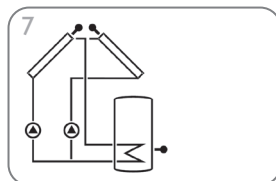


Solar system with east-/west collectors and 1 store (page 33)

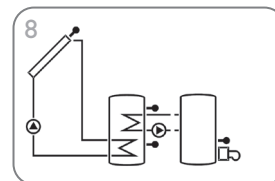

Solar system with backup heating by solid fuel boiler (page 36)

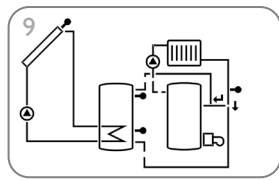

Solar system with heating circuit return preheating (page 42)

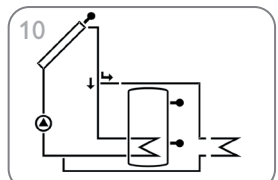

Standard solar system with heat dump (page 45)




Arrangement 1: Standard solar system

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

Sensors S3 and S4 can optionally be connected. S3 can optionally be used as the reference sensor for the store emergency shutdown option (OSEM).

If heat quantity measurement (OHQM) is activated, S4 is used as the return sensor.

If the drainback option (ODB) is activated, relay 2 can be used for activating a booster pump. For this purpose, the booster function (OBST) has to be activated.

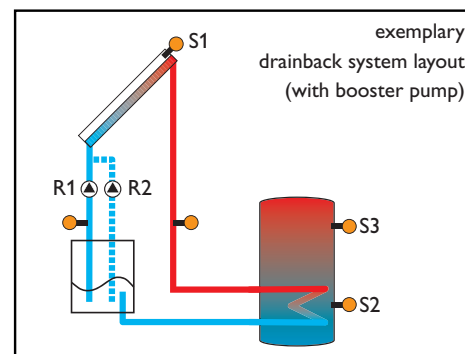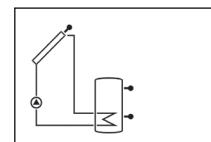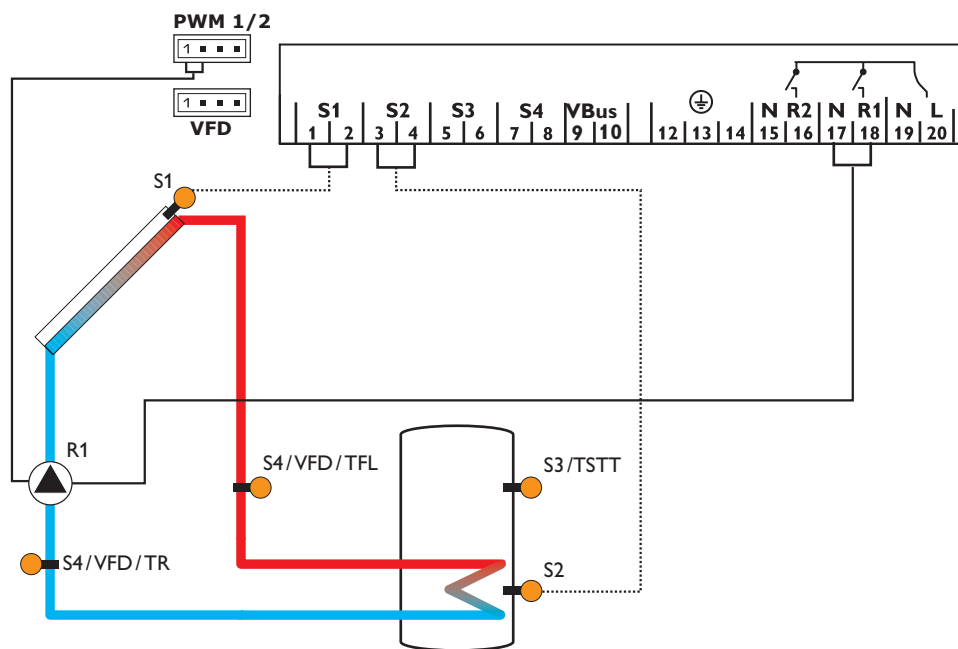

Display channels				
Channel		Description	Connection terminal	Page
INIT	x*	ODB initialisation active	-	52
FLL	x*	ODB filling time active	-	52
STAB	x*	ODB stabilisation in progress	-	52
COL	x	Temperature collector	S1	53
TST	x	Temperature store	S2	53
S3	x	Temperature sensor 3	S3	53
TSTT	x*	Temperature store top	S3	53
S4	x	Temperature sensor 4	S4	53
TFL	x*	Temperature flow sensor	S1 / S4 / VFD	53
TR	x*	Temperature return sensor	S4 / VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n %	x	Speed R1	R1	54
hP	x	Operating hours R1	R1	55
hP1	x*	Operating hours R1 (if OBST is activated)	R1	55
hP2	x*	Operating hours R2 (if OBST is activated)	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	1	55
DT O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
nMN	x	Minimum speed R1	30 %	57
nMX	x	Maximum speed R1	100 %	57
S MX	x	Maximum store temperature	60 °C [140 °F]	57
OSEM	x	Store emergency shutdown option	OFF	58
EM	x	Collector emergency temperature	130 °C [270 °F]	58
		Collector emergency temperature if ODB is activated:	95 °C [200 °F]	58
OCC	x	Collector cooling option	OFF	58
CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59

Adjustment channels

Channel		Description	Factory setting	Page
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
FMAX	x*	Maximum flow rate	6.0 l/min	62
MEDT	x*	Antifreeze type	1	63
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene glycol)	45 %	63
ODB	x	Drainback option	OFF	64
tDTO	x*	ODB switch-on condition - time period	60 s	64
tFLL	x*	ODB filling time	5.0 min	64
tSTB	x*	ODB stabilisation time	2.0 min	64
OBST	s*	Option booster function	OFF	64
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.
s*	System-specific channel, only available if the corresponding option is activated



Arrangement 2: Solar system with heat exchange

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

Heat exchange from store 1 to store 2 will be operated by relay 2, if the temperature difference between sensors S3 and S4 is larger than or identical to the adjusted

switch-on temperature difference (DT3O), until the adjusted minimum (MN3O) and maximum (MX3O) temperature thresholds of the respective store are reached. S3 can optionally be used as the reference sensor for the store emergency shut-down option (OSEM).

If heat quantity measurement (OHQM) is activated, S1 and VFD are used as the flow and return sensors respectively.

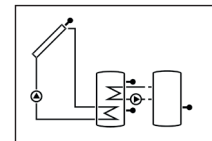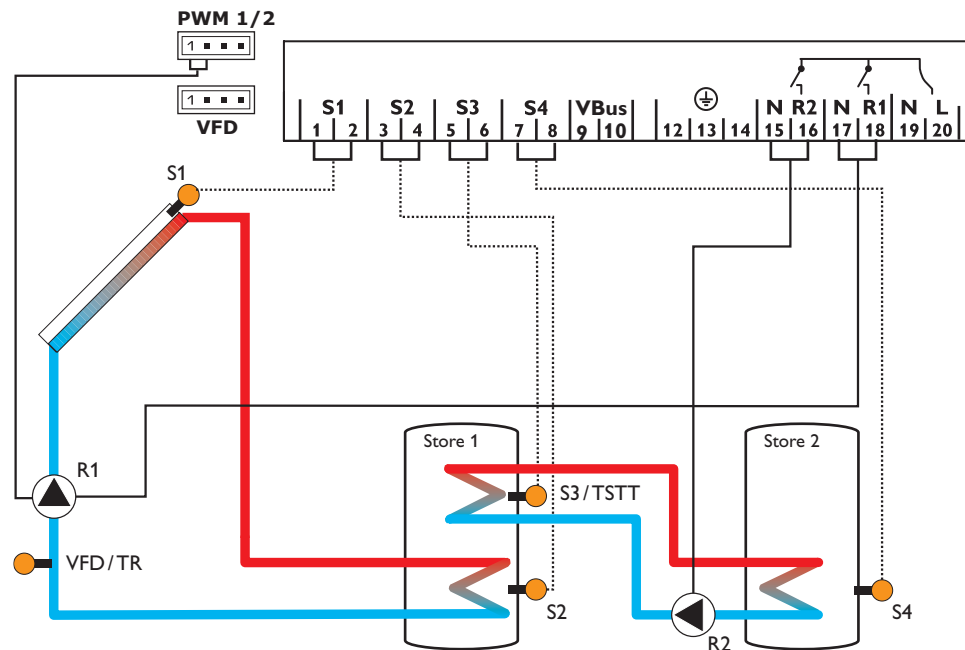

en	Display channels			
	Channel	Description	Connection terminal	Page
Installation	INIT	x* ODB initialisation active	-	52
	FLL	x* ODB filling time active	-	52
	STAB	x* ODB stabilisation in progress	-	52
	COL	x Temperature collector	S1	53
	TST1	x Temperature store 1 base	S2	53
	TSTT	x Temperature store 1 top	S3	53
	TST2	x Temperature store 2 base	S4	53
	TFL	x* Temperature flow sensor	S1	53
	TR	x* Temperature return sensor	VFD	53
	VFD	x* Temperature Grundfos Direct Sensor™	VFD	53
Operation and function	L/h	x* Flow rate Grundfos Direct Sensor™	VFD	54
	n1%	x Speed R1	R1	54
	n2%	x Speed R2	R2	54
	h P1	x Operating hours R1	R1	55
	h P2	x Operating hours R2	R2	55
	kWh	x* Heat quantity in kWh	-	54
	MWh	x* Heat quantity in MWh	-	54
	TIME	x Time	-	55
	Adjustment channels			
	Channel	Description	Factory setting	Page
Commissioning	Arr	x System	2	55
	DT O	x Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
	DT F	x Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
	DT S	x Set temperature difference R1	10.0 K [20.0 °Ra]	56
	RIS	x Rise R1	2 K [4 °Ra]	56
	PUM1	x Pump control type R1	PSOL	57
	n1MN	x Minimum speed R1	30%	57
	n1MX	x Maximum speed R1	100%	57
	S MX	x Maximum store temperature	60 °C [140 °F]	57
	OSEM	x Store emergency shutdown option	OFF	58
Indications, functions and options	PUM2	x Pump control type R2	OnOF	57
	n2MN	x* Minimum speed R2	30%	57
	n2MX	x* Maximum speed R2	100%	57
	EM	Collector emergency temperature	130 °C [270 °F]	58
		Collector emergency temperature if ODB is activated:	95 °C [200 °F]	58
	OCC	x Collector cooling option	OFF	58
	CMX	x* Maximum collector temperature	110 °C [230 °F]	58
	OSYC	x System cooling option	OFF	59
	DTCO	x* Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
	DTCF	x* Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
Messages				

Adjustment channels				
Channel		Description	Factory setting	Page
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
MEDT	x*	Antifreeze type	1	61
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene)	45 %	63
DT3O	s	Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
DT3F	s	Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
DT3S	s	Set temperature difference R2	10.0 K [20.0 °Ra]	56
RIS3	s	Rise R2	2 K [4 °Ra]	56
MX3O	s	Switch-on threshold for maximum temperature	60.0 °C [140.0 °F]	41
MX3F	s	Switch-off threshold for maximum temperature	58.0 °C [136.0 °F]	41
MN3O	s	Switch-on threshold for minimum temperature	5.0 °C [40.0 °F]	41
MN3F	s	Switch-off threshold for minimum temperature	10.0 °C [50.0 °F]	41
ODB	x	Drainback option	OFF	64
tDTO	x*	ODB switch-on condition - time period	60 s	64
tFLL	x*	ODB filling time	5.0 min	64
tSTB	x*	ODB stabilisation time	2.0 min	64
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		


Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.
s	System-specific channel

System-specific functions

The following adjustments are used for the specific functions in system 2.

ΔT control for the heat exchange between 2 stores



DT3O

Switch-on temperature difference

Adjustment range: 1.0 ... 20.0 K [2.0 ... 40.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]



DT3F

Switch-off temperature difference

Adjustment range: 0.5 ... 19.5 K [1.0 ... 39.0 °Ra]

Factory setting: 4.0 K [8.0 °Ra]

S3 and S4 are used as the reference sensors for this function.

In system 2 the controller is equipped with an additional differential control for heat exchange between two stores. The basic differential function is adjusted using the switch-on (**DT3O**) and switch-off (**DT3F**) temperature differences.

When the temperature difference exceeds the adjusted switch-on temperature difference, relay 2 switches on. When the temperature difference falls below the adjusted switch-off temperature difference, relay 2 switches off.



Note

The switch-on temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-off temperature difference.

Speed control



DT3S

Set temperature difference


Adjustment range: 1.5 ... 30.0 K [3.0 ... 60.0 °Ra]

Factory setting: 10.0 K [20.0 °Ra]



Note

For pump speed control of the heat exchange pump, the operating mode of relay 2 must be set to **Auto** in the adjustment channel **MAN2**.



RIS3

Rise

Adjustment range: 1 ... 20 K [2 ... 40 °Ra]

Factory setting: 2 K [4 °Ra]


If the switch-on difference is reached, the pump switches on at full speed for 10 s. Then, the speed is reduced to the minimum pump speed value (**n2MN**).

If the temperature difference reaches the adjusted set value (**DT3S**), the pump speed increases by one step (10%). Each time the difference increases by the adjustable rise value **RIS3**, the pump speed increases by 10% until the maximum pump speed of 100% is reached.



Note

The set temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-on temperature difference.



PUM2

Pump control type R2

Selection: OnOF, PULS, PSOL, PHEA

Factory setting: OnOF

With this parameter, the pump control type can be adjusted. The following types can be selected:

Adjustment for standard pump without speed control

- OnOF (pump on/pump off)

Adjustment for standard pump with speed control

- PULS (burst control via semiconductor relay)

Adjustment for high-efficiency pump (HE pump)

- PSOL (PWM profile for a HE solar pump)
- PHEA (PWM profile for a HE heating pump)



n2MN

Minimum speed R2

Adjustment range: (10) 30 ... 100 %

Factory setting: 30 %

A relative minimum pump speed can be allocated to the output R2 via the adjustment channel **n2MN**.



Note

The pump speed must be set to 100 % when auxiliary relays or valves are connected.



n2MX

Maximum speed R2

Adjustment range: (10) 30 ... 100 %

Factory setting: 100 %

In the adjustment channel **n2MX** a relative maximum speed for a pump connected can be allocated to the output R2.



Note

The pump speed must be set to 100 % when auxiliary relays or valves are connected.

Maximum temperature limitation heat exchange



MX3O SET
60.0



MX3F SET
58.0

MX3O/MX3F

Maximum temperature limitation

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

Factory setting:

MX3O: 60.0 °C [140.0 °F]

MX3F: 58.0 °C [136.0 °F]

S4 is used as the reference sensor for the maximum temperature limitation.

The maximum temperature limitation function provides a maximum temperature setting, usually to reduce scald risk in a store. If **MX3O** is exceeded, relay 2 is switched off until the temperature at sensor 4 falls below **MX3F**.

Minimum temperature limitation heat exchange



MN3O SET
5.0



MN3F SET
10.0

MN3O/MN3F

Minimum temperature limitation

Adjustment range: 0.0 ... 90.0 °C [30.0 ... 190.0 °F]

Factory setting (only if Arr = 2):

MN3O: 5.0 °C [40.0 °F]

MN3F: 10.0 °C [50.0 °F]

S3 is used as the reference sensor for the minimum temperature limitation.

The minimum temperature limitation function provides a minimum temperature setting for the heat source in system 2. If the temperature at sensor 3 falls below **MN3O**, relay 2 is switched off until the temperature at sensor 3 exceeds **MN3F**.

Both switch-on and switch-off temperature differences **DT3O** and **DT3F** are valid for the maximum and minimum temperature limitation.

Arrangement 3: Solar system with backup heating



The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

Sensor S3 is used for a thermostat function, which operates relay 2 for backup heating or heat dump purposes, when the adjusted thermostat switch-on tempera-

ture (AH O) is reached. This function can optionally be combined with up to three adjustable time frames.

Sensor S3 can optionally be used as the reference sensor for the thermal disinfection function (OTD) or the store emergency shutdown option (OSEM).

Sensor S4 can optionally be connected. If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

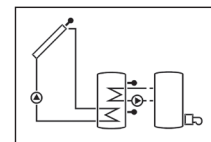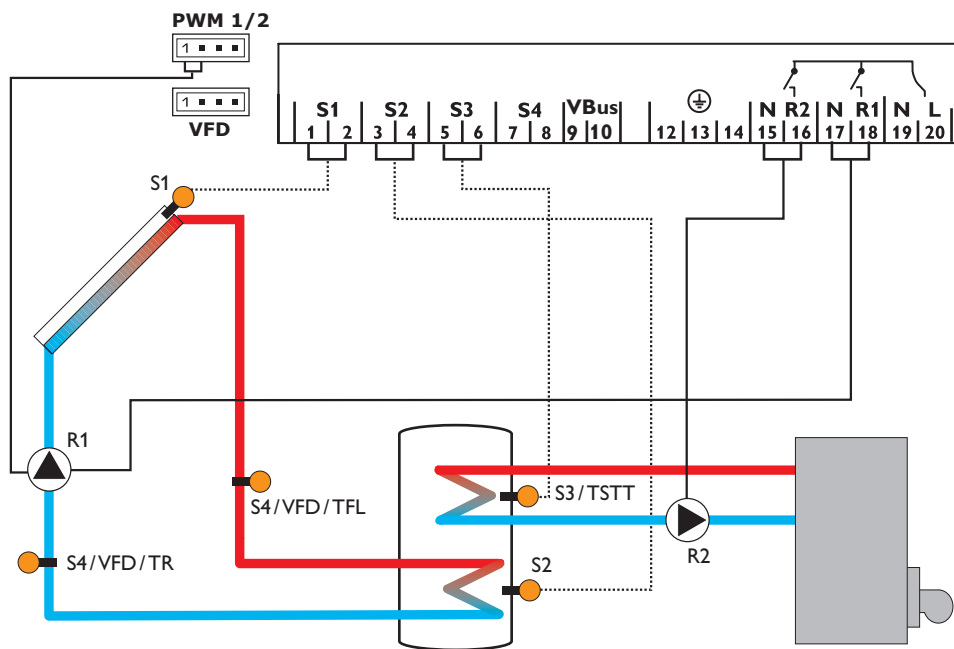

Display channels

Channel		Description	Connection terminal	Page
INIT	x*	ODB initialisation active	-	52
FLL	x*	ODB filling time active	-	52
STAB	x*	ODB stabilisation in progress	-	52
COL	x	Temperature collector	S1	53
TSTB	x	Temperature store 1 base	S2	53
TSTT	x	Temperature store 1 top	S3	53
TDIS	s*	Thermal disinfection temperature (thermal disinfection)	S3	53
S4	x	Temperature sensor 4	S4	53
TFL	x*	Temperature flow sensor	S1/S4/VFD	53
TR	x*	Temperature return sensor	S4/VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n1%	x	Speed R1	R1	54
h P1	x	Operating hours R1	R1	55
h P2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
CDIS	s*	Countdown of monitoring period (thermal disinfection)	-	54
SDIS	s*	Starting time display (thermal disinfection)	-	54
DDIS	s*	Heating period display (thermal disinfection)	-	54
TIME	x	Time	-	55

Adjustment channels

Channel		Description	Factory setting	Page
Arr	x	System	3	55
DT O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
n1MN	x	Minimum speed R1	30%	57
n1MX	x	Maximum speed R1	100%	57
S MX	x	Maximum store temperature	60 °C [140 °F]	57
OSEM	x	Store emergency shutdown option	OFF	58
EM	x	Collector emergency temperature	130 °C [270 °F]	58
		Collector emergency temperature if ODB is activated:	95 °C [200 °F]	58
OCC	x	Collector cooling option	OFF	58
CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59

Adjustment channels				
Channel		Description	Factory setting	Page
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
FMAX	x*	Maximum flow rate	6.0 l/min	62
MEDT	x*	Antifreeze type	1	63
MED%	x*	Antifreeze concentration	45 %	63
AH O	s	Switch-on temperature for thermostat	40 °C [110 °F]	22
AH F	s	Switch-off temperature for thermostat	45 °C [120 °F]	22
t1 O	s	Thermostat switch-on time 1	00:00	22
t1 F	s	Thermostat switch-off time 1	00:00	22
t2 O	s	Thermostat switch-on time 2	00:00	22
t2 F	s	Thermostat switch-off time 2	00:00	22
t3 O	s	Thermostat switch-on time 3	00:00	22
t3 F	s	Thermostat switch-off time 3	00:00	22
ODB	x	Drainback option	OFF	64
tDTO	x*	ODB switch-on condition - time period	60 s	64
tFLL	x*	ODB filling time	5.0 min	64
tSTB	x*	ODB stabilisation time	2.0 min	64
OTD	s	Thermal disinfection option	OFF	23
PDIS	s*	Monitoring period	01:00	23
DDIS	s*	Heating period	01:00	23
TDIS	s*	Disinfection temperature	60 °C [140 °F]	23
SDIS	s*	Starting time	00:00	23
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:


Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.
s	System-specific channel
s*	System-specific channel, only available if the corresponding option is activated

System-specific functions


The following adjustments are used for the specific functions in system 3. The channels described are not available in any other systems.

Thermostat function

Backup heating

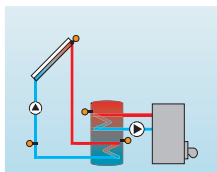

Use of surplus energy

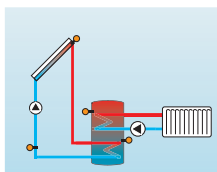

The thermostat function works independently from the solar operation and can be used for using surplus energy or for backup heating.

- **AH O < AH F**

thermostat function for backup heating

- **AH O > AH F**

thermostat function for using surplus energy

The symbol  will be shown on the display, if the second relay output is activated.

S3 is used as the reference sensor for the thermostat function.



AH O

Thermostat switch-on temperature

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

Factory setting: 40.0 °C [110.0 °F]




AH F

Thermostat switch-off temperature

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

Factory setting: 45.0 °C [120.0 °F]



t1 O, t2 O, t3 O

Thermostat switch-on time

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00



t1 F, t2 F, t3 F

Thermostat switch-off time

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00

In order to block the thermostat function for a certain period, there are 3 time frames t1 ... t3.

If the thermostat function is supposed to run from 06:00 a.m. to 09:00 a.m. only, adjust **t1 O** to 06:00 a.m. and **t1 F** to 09:00 a.m.

If the switch-on and switch-off times of a time frame are set to an identical value, the time frame will be inactive. If all time frames are set to 00:00, the thermostat function is solely temperature dependent (factory setting).

Thermal disinfection of the upper DHW zone




OTD

Therm. disinfection function
Adjustment range: OFF/ON
Factory setting: OFF




PDIS

Monitoring period
Adjustment range: 0 ... 30:0 ... 24 h (dd:hh)
Factory setting: 01:00

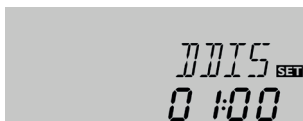

DDIS

Heating period
Adjustment range: 0:00 ... 23:59 (hh:mm)
Factory setting: 01:00



TDIS

Disinfection temperature
Adjustment range: 0 ... 95 °C [30 ... 200 °F]
Factory setting: 60 °C [140 °F]


This function helps to contain the spread of Legionella in DHW stores by systematically activating the backup heating.

For thermal disinfection, the temperature at the reference sensor will be monitored. Protection is ensured when, during the monitoring period, the disinfection temperature is continuously exceeded for the entire disinfection period.

The monitoring period starts as soon as the temperature at the reference sensor falls below the disinfection temperature. When the monitoring period ends, the allocated reference relay activates the backup heating. The disinfection period starts, if the temperature at the allocated sensor exceeds the disinfection temperature.

Thermal disinfection can only be completed when the disinfection temperature is exceeded for the duration of the disinfection period without any interruption.

Starting time delay

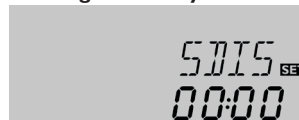

SDIS

Starting time
Adjustment range: 0:00 ... 24:00 (time)
Factory setting: 00:00

If the starting delay option is activated, a starting time for the thermal disinfection with starting delay can be adjusted. The activation of the backup heating is then delayed until that starting time after the monitoring period has ended.

If the monitoring period ends, for example, at 12:00 o'clock, and the starting time has been set to 18:00, the reference relay will be energised with a delay of 6 hours at 18:00 instead of 12:00 o'clock.



Note



If the thermal disinfection option is activated, the display channels **TDIS**, **CDIS**, **SDIS** and **DDIS** will be displayed.

Arrangement 4: Solar system with store loading in layers

The controller calculates the temperature difference between collector sensor S1 and store sensors S2 and S3. If the difference is larger than or identical to the corresponding adjusted switch-on temperature differences (DT1O/DT2O), the solar pump will be activated by relay 1, and the corresponding store zone will be loaded until the switch-off temperature difference (DT1F/DT2F) or the maximum store

temperature (S1MX/S2MX) is reached. The priority logic causes priority loading of the upper store zone, if possible. In that case, the 3-port valve will be operated by relay 2.

If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

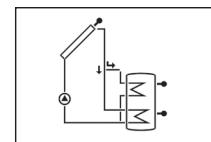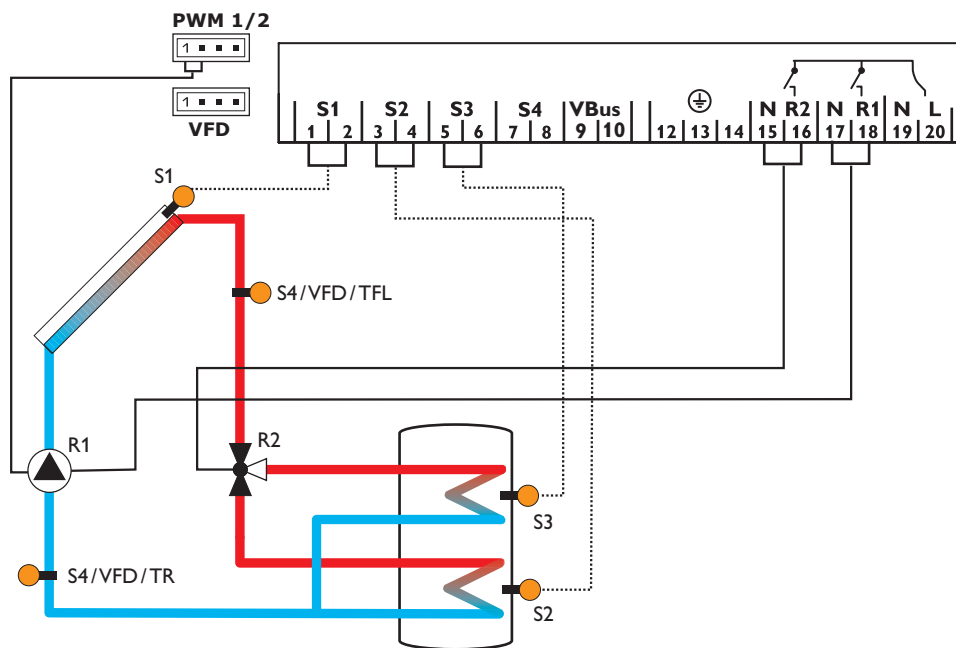

Display channels				
Channel		Description	Connection terminal	Page
COL	x	Temperature collector	S1	53
TSTB	x	Temperature store 1 base	S2	53
TSTT	x	Temperature store 1 top	S3	53
S4	x	Temperature sensor 4	S4	53
TFL	x*	Temperature flow sensor	S1/S4/VFD	53
TR	x*	Temperature return sensor	S4/VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n%	x	Speed relay	R1	54
hP1	x	Operating hours R1	R1	55
hP2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	4	55
PUM1	x	Pump control type R1	PSOL	57
nMN	x	Minimum speed R1	30%	57
nMX	x	Maximum speed R1	100%	57
DT1O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT1F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT1S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS1	x	Rise R1	2 K [4 °Ra]	56
S1MX	x	Maximum store temperature 1	60 °C [140 °F]	56
DT2O	x	Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
DT2F	x	Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
DT2S	x	Set temperature difference R2	10.0 K [20.0 °Ra]	56
RIS2	x	Rise R2	2 K [4 °Ra]	56
S2MX	x	Maximum store temperature 2	60 °C [140 °F]	56
EM	x	Collector emergency temperature	130 °C [270 °F]	56
OCC	x	Collector cooling option	OFF	58
CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59

Adjustment channels

Channel		Description	Factory setting	Page
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
PRIO	x	Priority	2	60
tLB	x	Loading break (store sequence control)	2 min	61
tRUN	x	Circulation runtime (store sequence control)	15 min	61
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
FMAX	x*	Maximum flow rate	6.0 l/min	62
MEDT	x*	Antifreeze type	1	63
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene glycol)	45%	63
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		



Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.

Arrangement 5: Solar system with 2 stores and valve logic

The controller calculates the temperature difference between collector sensor S1 and store sensors S2 and S3. If the difference is larger than or identical to the corresponding adjusted switch-on temperature differences (DT1O/DT2O), the solar pump will be activated by relay 1, and the corresponding store will be loaded until the switch-off temperature difference (DT1F/DT2F) or the maximum store

temperature (S1MX/S2MX) is reached. The priority logic causes priority loading of store 1. If store 2 is being loaded, relay 2 switches the 3-port valve. If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

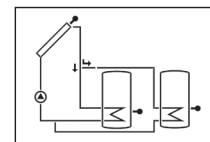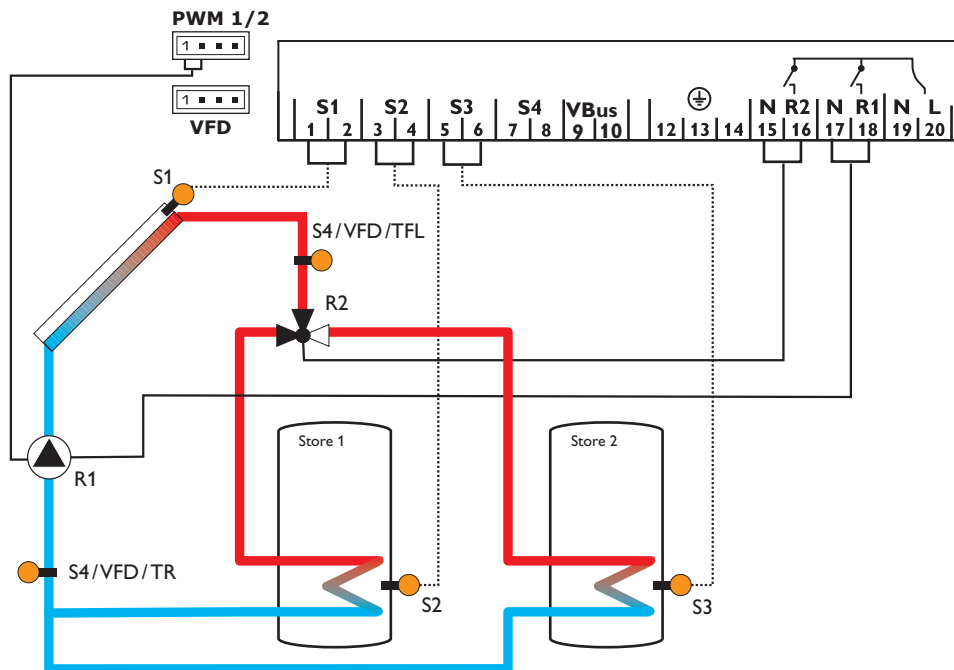

en	Display channels				
	Channel		Description	Connection terminal	Page
Installation	COL	x	Temperature collector	S1	53
	TST1	x	Temperature store 1 base	S2	53
	TST2	x	Temperature store 2 base	S3	53
	S4	x	Temperature sensor 4	S4	53
Operation and function	TFL	x*	Temperature flow sensor	S1/S4/VFD	53
	TR	x*	Temperature return sensor	S4/VFD	53
	VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
	L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
	n%	x	Speed relay R1	R1	54
	hP1	x	Operating hours R1	R1	55
	hP2	x	Operating hours R2	R2	55
	kWh	x*	Heat quantity in kWh	-	54
	MWh	x*	Heat quantity in MWh	-	54
	TIME	x	Time	-	55
Commissioning	Adjustment channels				
	Channel		Description	Factory setting	Page
Indications, functions and options	Arr	x	System	5	55
	PUM1	x	Pump control type R1	PSOL	57
	nMN	x	Minimum speed R1	30%	57
	nMX	x	Maximum speed R1	100%	57
	DT1O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
	DT1F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
	DT1S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
	RIS1	x	Rise R1	2 K [4 °Ra]	56
	S1MX	x	Maximum store temperature 1	60 °C [140 °F]	56
	DT2O	x	Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
	DT2F	x	Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
	DT2S	x	Set temperature difference R2	10.0 K [20.0 °Ra]	56
	RIS2	x	Rise R2	2 K [4 °Ra]	56
	S2MX	x	Maximum store temperature 2	60 °C [140 °F]	56
	EM	x	Collector emergency temperature	130 °C [270 °F]	56
	OCC	x	Collector cooling option	OFF	58
	CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
	OSYC	x	System cooling option	OFF	59
	DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
Messages	DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
	OSTC	x	Store cooling option	OFF	59

Adjustment channels				
Channel		Description	Factory setting	Page
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
PRIO	x	Priority	1	60
tLB	x	Loading break (store sequence control)	2 min	61
tRUN	x	Circulation runtime (store sequence control)	15 min	61
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
FMAX	x*	Maximum flow rate	6.0 l/min	62
MEDT	x*	Antifreeze type	1	63
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene glycol)	45 %	63
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:



Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.

Arrangement 6: Solar system with 2 stores and pump logic

The controller calculates the temperature difference between collector sensor S1 and store sensors S2 and S3. If the difference is larger than or identical to the corresponding adjusted switch-on temperature differences (DT1O/DT2O), one or both solar pumps will be activated by relay 1 and/or relay 2, and the corresponding store will be loaded until the switch-off temperature difference (DT1F/DT2F) or the maximum store temperature (S1MX/S2MX) is reached. The priority logic causes

priority loading of the store selected in the PRIO channel, if possible. If PRIO = 0, both stores will be loaded simultaneously.

Sensor S4 can optionally be used as the reference sensor for the store emergency shutdown option (OSEM). If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

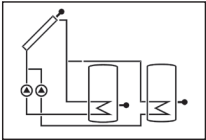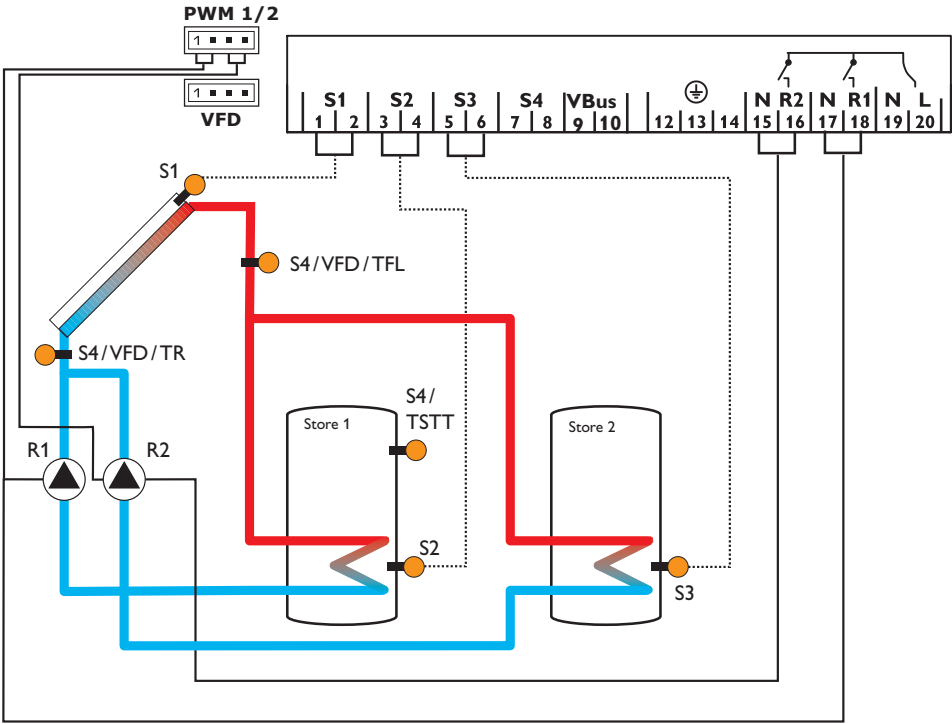

Display channels				
Channel		Description	Connection terminal	Page
COL	x	Temperature collector	S1	53
TST1	x	Temperature store 1 base	S2	53
TST2	x	Temperature store 2 base	S3	53
S4	x	Temperature sensor 4	S4	53
TSTT	x*	Temperature store top	S4	53
TFL	x*	Temperature flow sensor	S4/VFD	53
TR	x*	Temperature return sensor	S4/VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n1 %	x	Speed R1	R1	54
n2 %	x	Speed R2	R2	54
h P1	x	Operating hours R1	R1	55
h P2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	6	55
DT1O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT1F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT1S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS1	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
n1MN	x	Minimum speed R1	30%	57
n1MX	x	Maximum speed R1	100%	57
S1MX	x	Maximum store temperature 1	60 °C [140 °F]	56
OSEM	x	Store emergency shutdown option	OFF	56
DT2O	x	Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
DT2F	x	Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
DT2S	x	Set temperature difference R2	10.0 K [20.0 °Ra]	56
RIS2	x	Rise R2	2 K [4 °Ra]	56
PUM2	x	Pump control type R2	PSOL	57
n2MN	x	Minimum speed R2	30%	57
n2MX	x	Maximum speed R2	100%	57
S2MX	x	Maximum store temperature 2	60 °C [140 °F]	56

en	Adjustment channels				
	Channel		Description	Factory setting	Page
Installation	EM	x	Collector emergency temperature	130 °C [270 °F]	56
	OCC	x	Collector cooling option	OFF	58
	CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
	OSYC	x	System cooling option	OFF	59
	DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
	DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
Operation and function	OSTC	x	Store cooling option	OFF	59
	OHOL	x*	Holiday cooling option	OFF	59
	THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
	OCN	x	Collector minimum limitation option	OFF	60
	CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
	OCF	x	Antifreeze option	OFF	60
Commissioning	CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
	PRIO	x	Priority	1	60
	tLB	x	Loading break (store sequence control)	2 min	61
	tRUN	x	Circulation runtime (store sequence control)	15 min	61
	DTSE	x*	Temperature difference spreaded loading	40 K [70 °Ra]	61
	OTC	x	Tube collector option	OFF	61
Indications, functions and options	TCST	x*	OTC starting time	07:00	61
	TCEN	x*	OTC ending time	19:00	62
	TCRU	x*	OTC runtime	30 s	62
	TCIN	x*	OTC standstill interval	30 min	62
	GFD	x	Grundfos Direct Sensor™	OFF	62
	OHQM	x	Heat quantity measurement option	OFF	62
Messages	SEN	x*	VFD allocation	2	63
	MEDT	x*	Antifreeze type	1	61
	MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene)	45 %	63
	MAN1	x	Manual mode R1	Auto	65
	MAN2	x	Manual mode R2	Auto	65
	LANG	x	Language	dE	65
	UNIT	x	Temperature unit	°C	65
	RESE	x	Reset - back to factory settings		65
	#####		Version number		



Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.

Arrangement 7: Solar system with east-/west collectors and 1 store

The controller calculates the temperature difference between collector sensors S1 and S3 and store sensor S2. If the differences are larger than or identical to the adjusted switch-on temperature difference (DT O), one or both solar pumps will be activated by relay 1 and/or relay 2, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

Sensor S4 can optionally be used as the reference sensor for the store emergency shutdown option (OSEM). If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

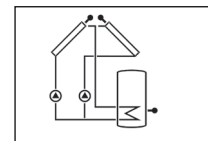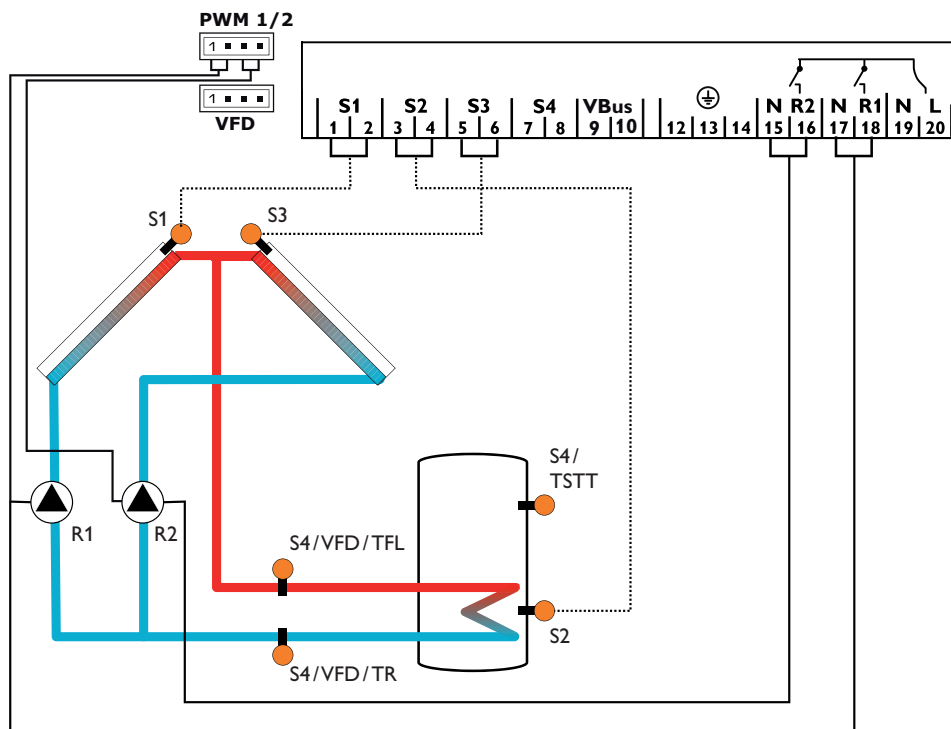

Display channels

Channel		Description	Connection terminal	Page
COL1	x	Temperature collector 1	S1	53
TST	x	Temperature store	S2	53
COL2	x	Temperature collector 2	S3	53
S4	x	Temperature sensor 4	S4	53
TSTT	x*	Temperature store top	S4	53
TFL	x*	Temperature flow sensor	S4/VFD	53
TR	x*	Temperature return sensor	S4/VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n1 %	x	Speed R1	R1	54
n2 %	x	Speed R2	R2	54
h P1	x	Operating hours R1	R1	55
h P2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels

Channel		Description	Factory setting	Page
Arr	x	System	7	55
DT O	x	Switch-on temperature difference R1/R2	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1/R2	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1/R2	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1/R2	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
n1MN	x	Minimum speed R1	30 %	57
n1MX	x	Maximum speed R1	100 %	57
S MX	x	Maximum store temperature	60 °C [140 °F]	56
OSEM	x	Store emergency shutdown option	OFF	56
PUM2	x	Pump control type R2	PSOL	57
n2MN	x	Minimum speed R2	30 %	57
n2MX	x	Maximum speed R2	100 %	57
EM1	x	Collector emergency temperature 1	130 °C [270 °F]	56
EM2	x	Collector emergency temperature 2	130 °C [270 °F]	56
OCC1	x	Collector cooling option collector 1	OFF	58
CMX1	x*	Maximum collector temperature 1	110 °C [230 °F]	58
OCC2	x	Collector cooling option collector 2	OFF	58

Adjustment channels				
Channel		Description	Factory setting	Page
CMX2	x*	Maximum collector temperature 2	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN1	x	Collector minimum limitation collector 1	OFF	60
CMN1	x*	Minimum collector temperature 1	10 °C [50 °F]	60
OCN2	x	Collector minimum limitation collector 2	OFF	60
CMN2	x*	Minimum collector temperature 2	10 °C [50 °F]	60
OCF1	x	Antifreeze option collector 1	OFF	60
CFR1	x*	Antifreeze temperature collector 1	4.0 °C [40.0 °F]	60
OCF2	x	Antifreeze option collector 2	OFF	60
CFR2	x*	Antifreeze temperature collector 2	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
MEDT	x*	Antifreeze type	1	61
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene)	45 %	63
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.



Arrangement 8: Solar system with backup heating by solid fuel boiler

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

A solid fuel boiler will be controlled by relay 2, if the temperature difference between sensors S4 and S3 is larger than or identical to the adjusted switch-on tem-

perature difference (DT3O), until the adjusted minimum (MN3O) and maximum (MX3O) temperature thresholds of the solid fuel boiler and the store are reached. S3 can optionally be used as the reference sensor for the store emergency shutdown option (OSEM).

If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

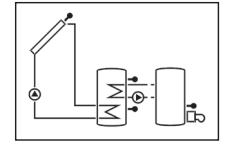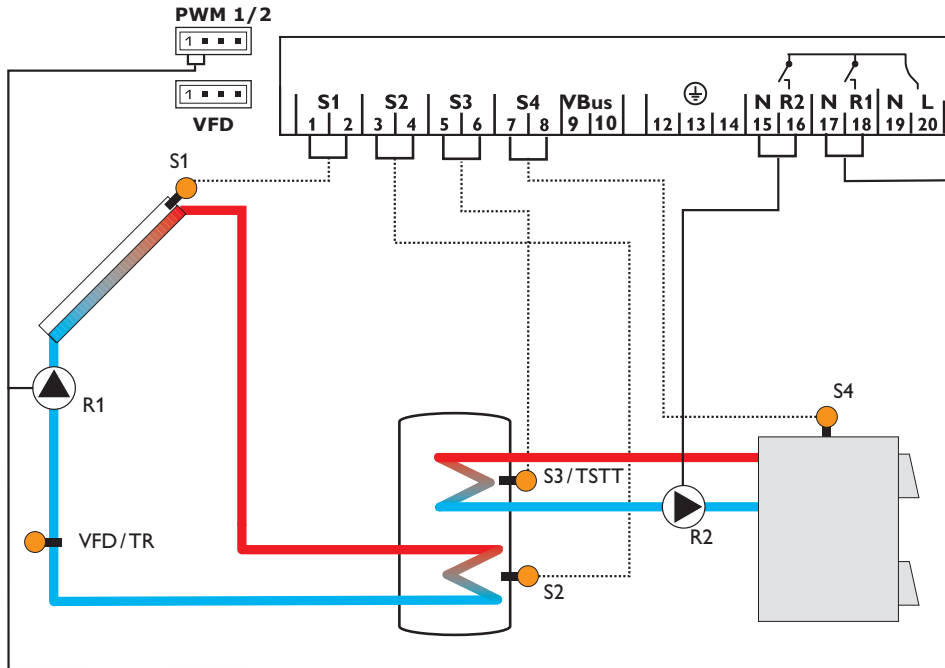

Display channels				
Channel		Description	Connection terminal	Page
INIT	x*	ODB initialisation active	-	52
FLL	x*	ODB filling time active	-	52
STAB	x*	ODB stabilisation in progress	-	52
COL	x	Temperature collector	S1	53
TSTB	x	Temperature store 1 base	S2	53
TSTT	x	Temperature store 1 top	S3	53
TSFB	x	Temperature solid fuel boiler	S4	53
TFL	x*	Temperature flow sensor	S1	53
TR	x*	Temperature return sensor	VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n1 %	x	Speed R1	R1	54
n2 %	x	Speed R2	R2	54
h P1	x	Operating hours R1	R1	55
h P2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	8	55
DT O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
n1MN	x	Minimum speed R1	30 %	57
n1MX	x	Maximum speed R1	100 %	57
S MX	x	Maximum store temperature	60 °C [140 °F]	56
OSEM	x	Store emergency shutdown option	OFF	56
PUM2	x	Pump control type R2	OnOF	57
n2MN	x*	Minimum speed R2	30 %	57
n2MX	x*	Maximum speed R2	100 %	57
EM	x	Collector emergency temperature	130 °C [270 °F]	56
		Collector emergency temperature if ODB is activated:	95 °C [200 °F]	56
OCC	x	Collector cooling option	OFF	58
CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59

en	Adjustment channels			
	Channel	Description	Factory setting	Page
Installation	OSTC	x Store cooling option	OFF	59
	OHOL	x* Holiday cooling option	OFF	59
	THOL	x* Holiday cooling temperature	40 °C [110 °F]	59
	OCN	x Collector minimum limitation option	OFF	60
	CMN	x* Collector minimum temperature	10 °C [50 °F]	60
	OCF	x Antifreeze option	OFF	60
	CFR	x* Antifreeze temperature	4.0 °C [40.0 °F]	60
	OTC	x Tube collector option	OFF	61
	TCST	x* OTC starting time	07:00	61
	TCEN	x* OTC ending time	19:00	62
Operation and function	TCRU	x* OTC runtime	30 s	62
	TCIN	x* OTC standstill interval	30 min	62
	GFD	x Grundfos Direct Sensor™	OFF	62
	OHQM	x Heat quantity measurement option	OFF	62
	SEN	x* VFD allocation	2	63
	MEDT	x* Antifreeze type	1	61
	MED%	x* Antifreeze concentration (only if MEDT = propylene or ethylene)	45 %	63
	DT3O	s Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
	DT3F	s Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
	DT3S	s Set temperature difference R2	10.0 K [20.0 °Ra]	56
Commissioning	RIS3	s Rise R2	2 K [4 °Ra]	56
	MX3O	s Switch-on threshold for maximum temperature	60.0 °C [140.0 °F]	41
	MX3F	s Switch-off threshold for maximum temperature	58.0 °C [136.0 °F]	41
	MN3O	s Switch-on threshold for minimum temperature	60.0 °C [140.0 °F]	41
	MN3F	s Switch-off threshold for minimum temperature	65.0 °C [150.0 °F]	41
	ODB	x Drainback option	OFF	64
	tDTO	x* ODB switch-on condition - time period	60 s	64
	tFLL	x* ODB filling time	5.0 min	64
	tSTB	x* ODB stabilisation time	2.0 min	64
	MAN1	x Manual mode R1	Auto	65
Indications, functions and options	MAN2	x Manual mode R2	Auto	65
	LANG	x Language	dE	65
	UNIT	x Temperature unit	°C	65
	RESE	x Reset - back to factory settings		65
	#####	Version number		


Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.
s	System-specific channel
s*	System-specific channel, only available if the corresponding option is activated

System-specific functions

The following adjustments are used for the specific functions in system 8.

ΔT control for the backup heating by a solid fuel boiler

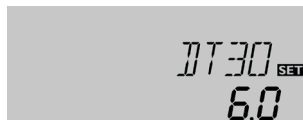

DT30

Switch-on temperature difference

Adjustment range: 1.0 ... 20.0 K [2.0 ... 40.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]

S4 and S3 are used as the reference sensors for this function.

In system 8 the controller is equipped with an additional differential control for heat exchange from a solid fuel boiler (e. g. pellet stove). The basic differential function is adjusted using the switch-on (**DT30**) and switch-off (**DT3F**) temperature differences.

When the temperature difference exceeds the adjusted switch-on temperature difference, relay 2 switches on. When the temperature difference falls below the adjusted switch-off temperature difference, relay 2 switches off.



DT3F

Switch-off temperature difference

Adjustment range: 0.5 ... 19.5 K [1.0 ... 39.0 °Ra]


Factory setting: 4.0 K [8.0 °Ra]



Note

The switch-on temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-off temperature difference.

Speed control

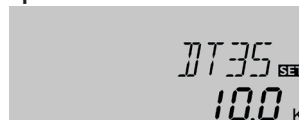

DT3S

Set temperature difference

Adjustment range: 1.5 ... 30.0 K [3.0 ... 60.0 °Ra]

Factory setting: 10.0 K [20.0 °Ra]



Note

For pump speed control of the heat exchange pump, the operating mode of relay 2 must be set to **Auto** in the adjustment channel **MAN2**.



RIS3

Rise

Adjustment range: 1 ... 20 K [2 ... 40 °Ra]

Factory setting: 2 K [4 °Ra]



Note

The set temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-on temperature difference.

If the switch-on difference is reached, the pump switches on at full speed for 10 s. Then, the speed is reduced to the minimum pump speed value (**n2MN**).

If the temperature difference reaches the adjusted set value (**DT3S**), the pump speed increases by one step (10%). Each time the difference increases by the adjustable rise value **RIS3**, the pump speed increases by 10% until the maximum pump speed of 100% is reached.

PUM2 SET
OnOF

PUM2

Pump control type R2

Selection: OnOF, PULS, PSOL, PHEA

Factory setting: OnOF

With this parameter, the pump control type can be adjusted. The following types can be selected:

Adjustment for standard pump without speed control

- OnOF (pump on/pump off)

Adjustment for standard pump with speed control

- PULS (burst control via semiconductor relay)

Adjustment for high-efficiency pump (HE pump)

- PSOL (PWM profile for a HE solar pump)
- PHEA (PWM profile for a HE heating pump)

Minimum speed

n2MN SET
30

n2MN

Minimum speed R2

Adjustment range: (10) 30 ... 100

Factory setting: 30

A relative minimum pump speed can be allocated to the output R2 via the adjustment channel **n2MN**.



Note

The pump speed must be set to 100% when auxiliary relays or valves are connected.

Maximum speed

n2MX SET
100

n2MX

Maximum speed R2

Adjustment range: (10) 30 ... 100 %

Factory setting: 100 %

In the adjustment channel **n2MX** a relative minimum speed for a pump connected can be allocated to the output R2.



Note

The pump speed must be set to 100% when auxiliary relays or valves are connected.

Maximum temperature limitation solid fuel boiler



MX30/MX3F

Maximum temperature limitation

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

Factory setting:

MX30: 60.0 °C [140.0 °F]

MX3F: 58.0 °C [136.0 °F]

S3 is used as the reference sensor for the maximum temperature limitation.

The maximum temperature limitation function provides a maximum temperature setting, usually to reduce scald risk in a store. If **MX30** is exceeded, relay 2 is switched off until the temperature at sensor 3 falls below **MX3F**.

Minimum temperature limitation solid fuel boiler



MN30/MN3F

Minimum temperature limitation

Adjustment range: 0.0 ... 90.0 °C [30.0 ... 190.0 °F]

Factory setting (only if Arr = 8):

MN30: 60.0 °C [140.0 °F]

MN3F: 65.0 °C [150.0 °F]

S4 is used as the reference sensor for the minimum temperature limitation.



The minimum temperature limitation function provides a minimum temperature setting for the solid fuel boiler in system 8. If the temperature at sensor 4 falls below **MN30**, relay 2 is switched off until the temperature at sensor 4 exceeds **MN3F**.

Both switch-on and switch-off temperature differences **DT30** and **DT3F** are valid for the maximum and minimum temperature limitation.

Arrangement 9: Solar system with heating-circuit return preheating

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

Heating-circuit return preheating will be activated by relay 2, if the temperature difference between sensors S3 and S4 is larger or identical to the adjusted switch-on temperature difference (DT3O). For this purpose, relay 2 controls the 3-port valve. S3 can optionally be used as the reference sensor for the store emergency shut-down option (OSEM). If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

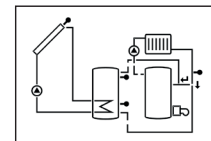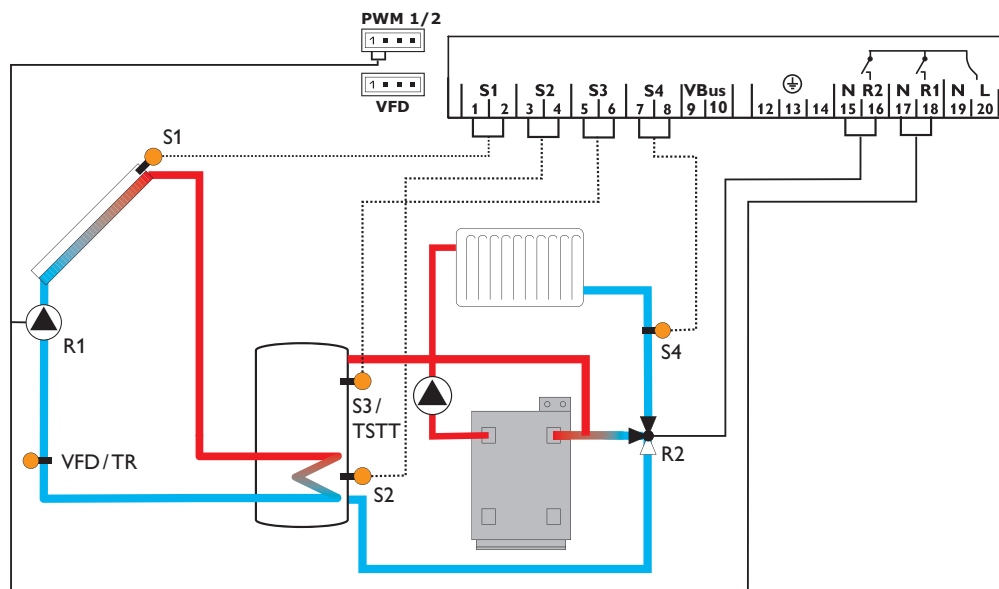

Display channels				
Channel		Description	Connection terminal	Page
INIT	x*	ODB initialisation active	-	52
FLL	x*	ODB filling time active	-	52
STAB	x*	ODB stabilisation in progress	-	52
COL	x	Temperature collector	S1	53
TSTB	x	Temperature store 1 base	S2	53
TSTT	x	Temperature store 1 top	S3	53
TFL	x*	Temperature flow sensor	S1	53
TR	x*	Temperature return sensor	VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
TRET	x	Temperature heating circuit	S4	53
n%	x	Speed relay R1	R1	54
hP1	x	Operating hours R1	R1	55
hP2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	9	55
DT O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
nMN	x	Minimum speed R1	30 %	57
nMX	x	Maximum speed R1	100 %	57
S MX	x	Maximum store temperature	60 °C [140 °F]	56
OSEM	x	Store emergency shutdown option	OFF	56
EM	x	Collector emergency temperature	130 °C [270 °F]	56
		Collector emergency temperature if ODB is activated:	95 °C [200 °F]	56
OCC	x	Collector cooling option	OFF	58
CMX	x*	Maximum collector temperature	110 °C [230 °F]	58
OSYC	x	System cooling option	OFF	59
DTCO	x*	Switch-on temperature difference cooling	20.0 K [40.0 °Ra]	59
DTCF	x*	Switch-off temperature difference cooling	15.0 K [30.0 °Ra]	59

Adjustment channels				
Channel		Description	Factory setting	Page
OSTC	x	Store cooling option	OFF	59
OHOL	x*	Holiday cooling option	OFF	59
THOL	x*	Holiday cooling temperature	40 °C [110 °F]	59
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
MEDT	x*	Antifreeze type	1	61
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene)	45 %	63
DT3O	s	Switch-on temperature difference R2	6.0 K [12.0 °Ra]	56
DT3F	s	Switch-off temperature difference R2	4.0 K [8.0 °Ra]	56
ODB	x	Drainback option	OFF	64
tDTO	x*	ODB switch-on condition - time period	60 s	64
tFLL	x*	ODB filling time	5.0 min	64
tSTB	x*	ODB stabilisation time	2.0 min	64
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.
s	System-specific channel
s*	System-specific channel, only available if the corresponding option is activated

Arrangement 10: Standard solar system with heat dump



The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference (DT O), the solar pump will be activated by relay 1, and the store will be loaded until the switch-off temperature difference (DT F) or the maximum store temperature (SMX) is reached.

If the collector maximum temperature (CMX) is reached, the solar pump will be activated by R1 and the 3-port valve by R2 in order to divert excess heat to a heat

sink. For safety reasons, excess heat dump will only take place as long as the store temperature is below the non-adjustable shutdown temperature of 95 °C [200 °F].

Sensors S3 and S4 can optionally be connected. S3 can optionally be used as the reference sensor for the store emergency shutdown option (OSEM).

If heat quantity measurement (OHQM) is activated, S4 and VFD are used as the flow and return sensors respectively.

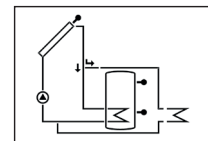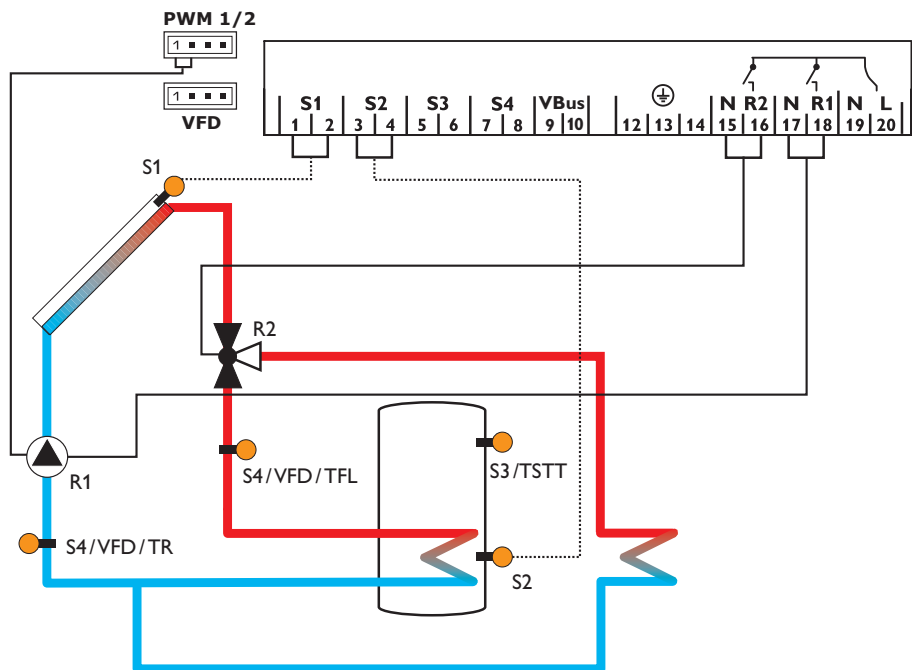

Display channels				
Channel		Description	Connection terminal	Page
COL	x	Temperature collector	S1	53
TST	x	Temperature store	S2	53
S3	x	Temperature sensor 3	S3	53
TSTT	x*	Temperature store top	S3	53
S4	x	Temperature sensor 4	S4	53
TFL	x*	Temperature flow sensor	S1/S4/VFD	53
TR	x*	Temperature return sensor	S4/VFD	53
VFD	x*	Temperature Grundfos Direct Sensor™	VFD	53
L/h	x*	Flow rate Grundfos Direct Sensor™	VFD	54
n %	x	Speed relay R1	R1	54
h P1	x	Operating hours R1	R1	55
h P2	x	Operating hours R2	R2	55
kWh	x*	Heat quantity in kWh	-	54
MWh	x*	Heat quantity in MWh	-	54
TIME	x	Time	-	55

Adjustment channels				
Channel		Description	Factory setting	Page
Arr	x	System	10	55
DT O	x	Switch-on temperature difference R1	6.0 K [12.0 °Ra]	56
DT F	x	Switch-off temperature difference R1	4.0 K [8.0 °Ra]	56
DT S	x	Set temperature difference R1	10.0 K [20.0 °Ra]	56
RIS	x	Rise R1	2 K [4 °Ra]	56
PUM1	x	Pump control type R1	PSOL	57
nMN	x	Minimum speed R1	30%	57
nMX	x	Maximum speed R1	100%	57
S MX	x	Maximum store temperature	60 °C [140 °F]	56
OSEM	x	Store emergency shutdown option	OFF	56
EM	x	Collector emergency temperature	130 °C [270 °F]	56
CMX	s	Maximum collector temperature	110 °C [230 °F]	58
OCN	x	Collector minimum limitation option	OFF	60
CMN	x*	Collector minimum temperature	10 °C [50 °F]	60
OCF	x	Antifreeze option	OFF	60
CFR	x*	Antifreeze temperature	4.0 °C [40.0 °F]	60
OTC	x	Tube collector option	OFF	61
TCST	x*	OTC starting time	07:00	61
TCEN	x*	OTC ending time	19:00	62


Adjustment channels				
Channel		Description	Factory setting	Page
TCRU	x*	OTC runtime	30 s	62
TCIN	x*	OTC standstill interval	30 min	62
GFD	x	Grundfos Direct Sensor™	OFF	62
OHQM	x	Heat quantity measurement option	OFF	62
SEN	x*	VFD allocation	2	63
FMAX	x*	Maximum flow rate	6.0 l/min	62
MEDT	x*	Antifreeze type	1	63
MED%	x*	Antifreeze concentration (only if MEDT = propylene or ethylene glycol)	45 %	63
MAN1	x	Manual mode R1	Auto	65
MAN2	x	Manual mode R2	Auto	65
LANG	x	Language	dE	65
UNIT	x	Temperature unit	°C	65
RESE	x	Reset - back to factory settings		65
#####		Version number		

Legend:

Symbol	Description
x	Channel is available
x*	Channel is available, if the corresponding option is activated.

3 Operation and function

3.1 Buttons

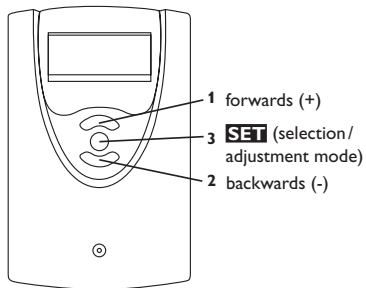

The controller is operated via the 3 buttons below the display.

Button 1 (+) is used for scrolling forwards through the menu and increasing adjustment values. **Button 2 (-)** is used for scrolling backwards through the menu and reducing adjustment values. **Button 3 (OK)** is used for selecting channels and confirming adjustments.

During normal operation, display channels will be displayed.

➔ In order to scroll between display channels, press buttons 1 and 2.

Access to adjustment channels:

➔ Use button 1 in order to scroll to the last display channel, then press and hold down button 1 for approx. 2 s.

If an **adjustment channel** is shown on the screen, **SET** will be displayed on the right-hand side next to the channel name.

1. Press button 3 in order to select an adjustment channel.

SET starts flashing.


2. Adjust the desired value with buttons 1 and 2.

3. Briefly press button 3.

SET permanently appears, the adjusted value has been saved.


4 System-Monitoring-Display

System-Monitoring-Display

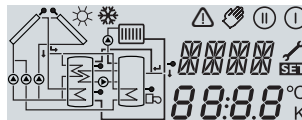

The System-Monitoring-Display consists of 3 blocks: channel display, tool bar and system screen.

Channel display

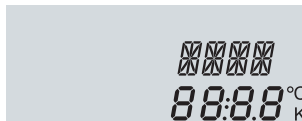

The channel display consists of 2 lines. The upper display line is an alphanumeric 16-segment display. In this line, mainly channel names and menu items are displayed. In the lower 16-segment display, values are displayed.

Tool bar



The additional symbols in the tool bar indicate the current system state.



Permanently shown	Flashing	Status indications:
①		Relay 1 active
②		Relay 2 active
☀		Maximum store temperature exceeded
	⚠ + ☀	Store emergency shutdown active
	⚠	Collector emergency shutdown active
①	☀	Collector cooling active
①	☀	System cooling active
① + ☀		Store cooling active
☀	⚠	Holiday cooling option activated
① + ☀	⚠	Holiday cooling active
	☀	Collector minimum limitation active
☀		Antifreeze function activated
① / ②	☀	Antifreeze function active
👤 + ①	⚠	Manual mode relay 1 ON
👤 + ②	⚠	Manual mode relay 2 ON
👤	⚠	Manual mode relay 1 / 2 OFF
🔧	⚠	Sensor fault

4.1 Flashing codes


- Pumps are flashing when the corresponding relay is switched on
- Sensor symbols are flashing, if the corresponding sensor display channel is selected
- Sensors are flashing quickly in the case of a sensor fault
- Burner symbol is flashing if the backup heating is active

System screen

The system selected is indicated in the System-Monitoring-Display. It consists of several system component symbols which are – depending on the current status of the system – either flashing, permanently shown or not indicated.

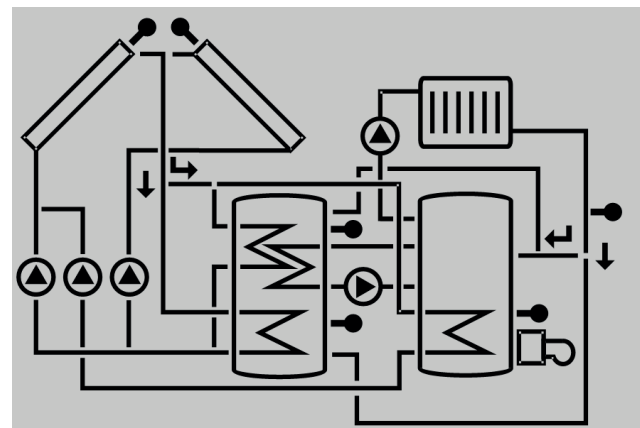

Collectors
with collector sensor



Store
with heat exchanger



3-port valve
Only the flow direction or current switching position is indicated.



Temperature sensor



Heating circuit




Pump



Backup heating
with burner symbol

5 Commissioning

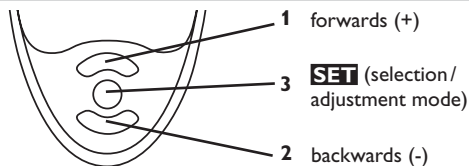


➔ Connect the device to the mains

The controller runs an initialisation phase.

When the controller is commissioned or when it is reset, it will run a commissioning menu. The commissioning menu leads the user through the most important adjustment channels needed for operating the system.

Operation

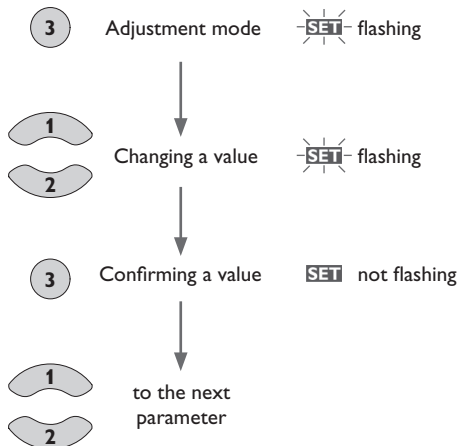

Commissioning

1. Language

➔ Adjust the desired menu language.

LANG

Language selection

Selection: dE, En, Fr, ES, It

Factory setting: dE



2. Temperature unit

➔ Adjust the desired unit.

UNIT

Temperature unit

Selection: °F, °C

Factory setting: °C




3. Time

➔ Adjust the clock time.

First of all adjust the hours, then the minutes.

TIME

Real time clock

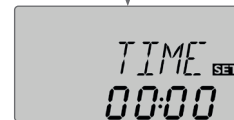

4. Arrangement

➔ Adjust the desired system.

For a detailed description of the systems to choose from, see page 10.

Arr

System selection

Adjustment range: 1 ... 10

Factory setting: 1

If the system selection is changed later on, any previous adjustments which have been made in the other channels will be lost. Therefore, changing the system is always followed by a security enquiry.



Commissioning

Only confirm the security enquiry if you are sure that you wish to change the system selection.

Security enquiry:

→ In order to confirm the security enquiry, press button 3.

5. Maximum store temperature

→ Adjust the desired maximum store temperature.

S MX/S1MX/S2MX

Maximum store temperature

Adjustment range: 4 ... 95 °C [40 ... 200 °F]

Arr 10: 4 ... 90 °C [40 ... 190 °F]

Factory setting: 60 °C [140 °F]



Note

The controller is also equipped with a non-adjustable emergency shutdown, deactivating the system if the store reaches 95 °C [200 °F].

6. Pump control type

→ Adjust the pump control type.

PUM1/PUM2

Pump control type

Selection: OnOF, PULS, PSOL, PHEA

Factory setting: PSOL

The following types can be selected:

Adjustment for standard pump without speed control


- OnOF (pump on/pump off)

Adjustment for standard pump with speed control

- PULS (burst control via semiconductor relay)

Adjustment for high-efficiency pump (HE pump)

- PSOL (PWM profile for a HE solar pump)
- PHEA (PWM profile for a HE heating pump)

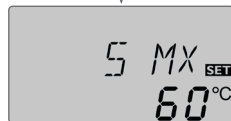

Commissioning

7. Minimum speed

→ Adjust the minimum speed for the corresponding pump.

nMN, n1MN, n2MN

Minimum speed

Adjustment range: (10) 30 ... 100 %

Factory setting: 30 %



Note

The pump speed must be set to 100% when auxiliary relays or valves are connected.

8. Maximum speed

→ Adjust the maximum speed for the corresponding pump.

nMX, n1MX, n2MX

Maximum speed



Adjustment range: (10) 30 ... 100 %

Factory setting: 100 %



Note

The pump speed must be set to 100% when auxiliary relays or valves are connected.

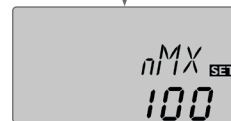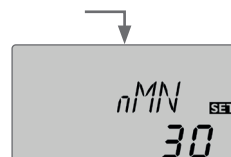


Confirmation**Completing the commissioning menu**

After the last channel of the commissioning menu has been adjusted and confirmed, the controller asks for confirmation of the adjustments.

→ In order to confirm the adjustments made in the commissioning menu, press button 3.

The controller is then ready for operation with the adjustments made for the system selected.

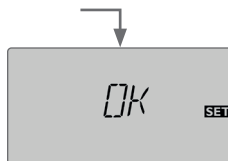**Note**

The adjustments carried out during commissioning can be changed anytime in the corresponding adjustment channel. Additional functions and options can also be activated or deactivated (see page 48).


6 Channel overview**6.1 Display channels****Note**

The display and adjustment channels as well as the adjustment ranges depend on the system selected, the functions and options as well as on the system components connected to the controller.

Display of drainback time periods**Initialisation****INIT**


ODB initialisation active

Indicates the time adjusted in tDTO, running backwards.

Filling time**FLL**

ODB filling time active

Indicates the time adjusted in tFLL, running backwards.

Stabilisation**STAB**

ODB stabilisation in progress

Indicates the time adjusted in tSTB, running backwards.

Display of collector temperatures



COL, COL1, COL2


Collector temperature

Display range: -40 ... +260 °C [-40 ... +500 °F]

Indicates the collector temperatures.

- COL : Collector temperature (1-collector system)
- COL1 : Collector temperature 1
- COL2 : Collector temperature 2

Display of store temperatures



TST, TSTB, TSTT, TST1, TST2, TDIS

Store temperatures


Display range: -40 ... +260 °C [-40 ... +500 °F]

Indicates the store temperatures.

- TST : Store temperature (1-store system)
- TSTB : Store temperature base
- TSTT : Store temperature top
- TST1 : Store temperature 1 (2-store system)
- TST2 : Store temperature 2 (2-store system)
- TDIS : Thermal disinfection temperature

(Arr = 3 only; replaces TSTT if, during thermal disinfection, the heating period DDIS is active)

Display of sensors 3, 4 and VFD



S3, S4, VFD

Sensor temperatures

Display range: -40 ... +260 °C [-40 ... +500 °F]

VFD: 0 ... 100 %

Indicates the current temperature at the corresponding additional sensor (without control function).

- S3 : Temperature at sensor 3
- S4 : Temperature at sensor 4
- VFD : Grundfos Direct Sensor™



Note

S3 and S4 will only be indicated if the temperature sensors are connected to the corresponding terminals. VFD will be indicated only if a Grundfos Direct Sensor™ has been connected and registered.

Display of further temperatures



TFSB, TRET, TFL, TR

Further measured temperatures

Display range: -40 ... +260 °C [-40 ... +500 °F]

Indicates the current temperature at the corresponding sensor. The display of these temperatures depends on the system selected.


- TFSB : Temperature solid fuel boiler
- TRET : Temperature heating circuit return preheating
- TFL : Temperature flow
- TR : Temperature return



Note

TFL / TR will be indicated only if the heat quantity measurement option (OHQM) has been activated.

Display of flow rate



l/h


Flow rate

Display range: depending on the sensor type used

Indicates the current flow rate at the VFD flow rate sensor.

The display range depends on the sensor type previously selected.

Display of current pump speed



n %, n1 %, n2 %

Current pump speed

Display range: 30 ... 100 %

Indicates the current pump speed of the corresponding pump.

- n % : Current pump speed (1-pump system)
- n1 % : Current pump speed pump 1
- n2 % : Current pump speed pump 2



kWh/MWh

Heat quantity in kWh/MWh

Display channel

Indicates the energy gained in heat quantity – only available if heat quantity measurement (**OHQM**) is activated.

The heat quantity measurement can be carried out in 2 different ways (see page 62): with a fixed flow rate value or with a VFD Grundfos Direct Sensor™. It is shown in kWh in the channel **kWh** and in MWh in the channel **MWh**. The overall heat quantity results from the sum of both values.

The accumulated heat quantity can be set back to zero. As soon as one of the display channels of the heat quantity is selected, the symbol **SET** is displayed.

1. In order to access the reset mode of the counter, press button 3 for approx. 2 s.

SET starts flashing and the heat quantity value will be set back to zero.

2. In order to finish the reset process, press button 3.

In order to interrupt the reset process, do not press any button for about 5 s. The display returns to the display mode.




CDIS

Countdown monitoring period

Display range: 0 ... 30:0 ... 24 (dd:hh)

If the thermal disinfection option (**OTD**) is activated and the monitoring period is in progress, the remaining time is displayed as **CDIS** (in hours and minutes), counting backwards.




SDIS

Display of starting time

Display range: 00:00 ... 24:00 (hh:mm)

If the thermal disinfection option (**OTD**) is activated and a starting delay time has been adjusted, the adjusted starting time is displayed as **SDIS** (flashing).




DDIS

Display of heating period

Display range: 00:00 ... 24:00 (hh:mm)

If the thermal disinfection option (**OTD**) is activated and the heating period is in progress, the remaining time is displayed as **CDIS** (in hours and minutes), counting backwards.




TIME

Indicates the current clock time.

1. In order to adjust the hours, press button 3 for approx. 2 s.
2. Set the hours by pressing buttons 1 and 2.
3. In order to adjust the minutes, press button 3.
4. Set the minutes by pressing buttons 1 and 2.
5. In order to save the adjustments, press button 3.

Operating hours counter



h P/h P1/h P2

Operating hours counter

Display channel

The operating hours counter accumulates the operating hours of the corresponding relay (**h P/h P1/h P2**). Full hours are displayed.

The accumulated operating hours can be set back to zero. As soon as an operating hours channel is selected, the symbol **SET** is displayed.

1. In order to access the reset mode of the counter, press button 3 for approx. 2 s. **SET** starts flashing and the operating hours will be set back to zero.

2. In order to finish the reset process, press button 3.

In order to interrupt the reset process, do not press any button for about 5 s. The display returns to the display mode.

6.2 Adjustment channels

System selection



Arr

System selection.


Adjustment range: 1 ... 10

Factory setting: 1

In this channel, a pre-defined system can be selected. Each system has a set of pre-programmed settings that can be individually changed.

If the system selection is changed later on, any previous adjustments which have been made in the other channels will be lost. Therefore, changing the system is always followed by a security enquiry.

Only confirm the security enquiry if you are sure that you wish to change the system selection.



Security enquiry:

➔ In order to confirm the security enquiry, press button 3.

ΔT control



DT O/DT1O/DT2O/DT3O

Switch-on temperature difference

Adjustment range: 1.0 ... 20.0 K [2.0 ... 40.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]


The controller works as a standard differential controller. If the temperature reaches or exceeds the switch-on temperature difference, the pump switches on.

When the temperature difference reaches or falls below the adjusted switch-off temperature difference, the respective relay switches off.



Note

The switch-on temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-off temperature difference.

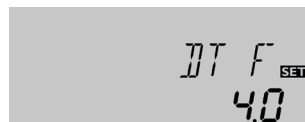

DT F/DT1F/DT2F/DT3F

Switch-off temperature difference

Adjustment range: 0.5 ... 19.5 K [1.0 ... 39.0 °Ra]

Factory setting: 4.0 K [8.0 °Ra]



Note

If the drainback option **ODB** is activated, the values of the parameters **DT O**, **DT F** and **DTS** will be adapted to values suiting drainback systems:

DT O = 10 K [20 °Ra]

DT F = 4 K [8 °Ra]

DTS = 15 K [30 °Ra]

Adjustments that have been previously made in these channels will be overridden and have to be entered again if **ODB** is deactivated later on.

Speed control



DTS/DT1S/DT2S/DT3S

Set temperature difference

Adjustment range:

1.5 ... 30.0 K [3.0 ... 60.0 °Ra]

Factory setting: 10.0 K [20.0 °Ra]



Note

For pump speed control, the operating mode of the corresponding relay must be set to Auto (adjustment channel **MAN1** / **MAN2**).


If the temperature difference reaches or exceeds the switch-on temperature difference, the pump switches on at 100% speed for 10 s. Then, the speed is reduced to the minimum pump speed value.

If the temperature difference reaches the adjusted set value, the pump speed increases by one step (10%). The response of the controller can be adapted via the parameter Rise. Each time the difference increases by the adjustable rise value, the pump speed increases by 10% until the maximum pump speed of 100% is reached. If the temperature difference decreases by the adjustable rise value, pump speed will be decreased by one step.



Note

The set temperature difference must be at least 0.5 K [1 °Ra] higher than the switch-on temperature difference.

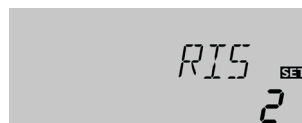


RIS/RIS1/RIS2/RIS3

Rise

Adjustment range:

1 ... 20 K [2 ... 40 °Ra]

Factory setting: 2 K [4 °Ra]



PUM1/PUM2

Pump control type

Selection: OnOF, PULS, PSOL, PHEA

Factory setting: PSOL

With this parameter, the pump control type can be adjusted. The following types can be selected:

Adjustment for standard pump without speed control

- OnOF (pump on/pump off)

Adjustment for standard pump with speed control

- PULS (burst control via semiconductor relay)

Adjustment for high-efficiency pump (HE pump)

- PSOL (PWM profile for a HE solar pump)
- PHEA (PWM profile for a HE heating pump)

Minimum speed



nMN, n1MN, n2MN

Minimum speed

Adjustment range: (10) 30 ... 100 %

Factory setting: 30 %

nMN, n1MN, if ODB is activated: 50 %

In the adjustment channels **nMN**, **n1MN** and **n2MN** a relative minimum pump speed for connected pumps can be allocated to the outputs R1 and R2.



Note

The pump speed must be set to 100 % when auxiliary relays or valves are connected.

Maximum speed



nMX, n1MX, n2MX

Maximum speed

Adjustment range: (10) 30 ... 100 %

Factory setting: 100 %


In the adjustment channel n1(2)MX a relative maximum speed for connected pumps can be allocated to the outputs R1 and R2.



Note

The pump speed must be set to 100 % when auxiliary relays or valves are connected.

Maximum store temperature



S MX/S1MX/S2MX

Maximum store temperature

Adjustment range: 4 ... 95 °C [40 ... 200 °F]

Arr 10: 4 ... 90 °C [40 ... 190 °F]

Factory setting: 60 °C [140 °F]

If the store temperature reaches the adjusted maximum temperature, the store will no longer be loaded in order to avoid damage caused by overheating. A non-adjustable hysteresis of 2 K [4 °Ra] is set for the maximum store temperature.

If the maximum store temperature is exceeded, ☼ is displayed.



Note

If the collector cooling or the system cooling function is activated, the adjusted maximum store temperature may be exceeded. In order to prevent system damage, the controller is also equipped with an integrated store emergency shutdown, deactivating the system if the store reaches 95 °C [200 °F].

Store emergency shutdown



OSEM

Store emergency shutdown option

Adjustment range: ON, OFF

Factory setting: OFF

This option is used for activating the internal store emergency shutdown for an upper store sensor. If the temperature at the reference sensor exceeds 95 °C, store 1 will be blocked and loading will be stopped until the temperature falls below 90 °C.




Note

Sensor S3 is used as the reference sensor in systems 1, 2, 3, 8, 9 and 10. In the systems 6 and 7, sensor S4 is used as the reference sensor. This option is not available in system layouts 4 and 5, in the system layouts 6 and 7 it will only be available if heat quantity measurement is deactivated.

Collector limit temperature

Collector emergency shutdown



EM/EM1/EM2

Collector limit temperature

Adjustment range: 80 ... 200 °C [170 ... 390 °F]

Factory setting: 130 °C [270 °F]

When the collector temperature exceeds the adjusted collector limit temperature, the solar pump (R1/R2) switches off in order to protect the system components against overheating (collector emergency shutdown). If the collector limit temperature is exceeded, Δ is displayed.



Note

If the drainback option **ODB** is activated, the adjustment range of **EM** will change to 80 ... 120 °C [170 ... 250 °F]. The factory setting in that case is 95 °C [200 °F].

Cooling functions

In the following the 3 cooling functions – collector cooling, system cooling and store cooling – are described in detail. The following notes are valid for all three cooling functions:



Note

The cooling functions will not become active as long as solar loading is possible.



Note

In 2-store-systems, the cooling functions will only affect store 1, or the base area of the store respectively.

Collector cooling



OCC/OCC1/OCC2

Collector cooling option

Adjustment range: OFF/ON

Factory setting: OFF



CMX/CMX1/CMX2

Collector maximum temperature

Adjustment range:

70 ... 160 °C [150 ... 320 °F]

Factory setting: 110 °C [230 °F]

The collector cooling function keeps the collector temperature within the operating range by heating the store. If the store temperature reaches 95 °C [200 °F] the function will switch off for safety reasons.

If the store temperature exceeds the adjusted maximum store temperature, the solar system is switched off. If the collector temperature increases to the adjusted maximum collector temperature, the solar pump is activated until the collector temperature falls below the maximum collector temperature. The store temperature may then exceed the maximum store temperature, but only up to 95 °C [200 °F] (emergency shutdown of the store).

If the collector cooling function is active, \odot and \star are displayed (flashing).



Note


This function will only be available if the system cooling function (**OSYC**) is deactivated.



Note

In system 10, the parameter **CMX** is available without the **OCC** function. In system 10, **CMX** is used for setting the activation temperature for the heat dump function. No other switch-on condition is needed in that case.

System cooling

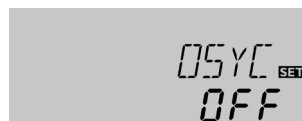


OSYC

System cooling option

Adjustment range: OFF/ON

Factory setting: OFF

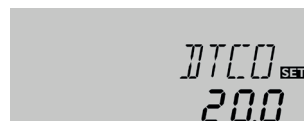

DTCO


Switch-on temperature difference

Adjustment range:

1.0 ... 30.0 K [2.0 ... 60.0 °Ra]

Factory setting: 20.0 K [40.0 °Ra]

The system cooling function aims to keep the solar system operational for a longer time. The function overrides the maximum store temperature to provide thermal relief of the collector field and the heat transfer fluid on hot days. If the store temperature is higher than the adjusted maximum store temperature and the switch-on temperature difference **DTCO** is reached, the solar pump remains switched on or will be switched on. Solar loading is continued until either the temperature difference falls below the adjusted value **DTCF** or the collector limit temperature is reached. If the system cooling function is active, ☉ and ☼ are displayed (flashing).



DTCF

Switch-off temperature difference

Adjustment range: 0.5 ... 29.5 K [1.0 ... 59.0 °Ra]


Factory setting: 15.0 K [30.0 °Ra]



Note

This function will only be available, if the collector cooling function (**OCC**) is deactivated.

Store cooling

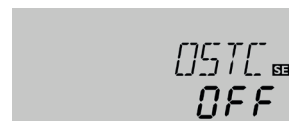

OSTC

Store cooling option

Adjustment range: OFF/ON

Factory setting: OFF



OHOL

Holiday cooling option

Adjustment range: OFF/ON

Factory setting: OFF



THOL

Holiday cooling temperature

Adjustment range: 20 ... 80 °C [70 ... 175 °F]

Factory setting: 40 °C [110 °F]

When the store cooling function is activated, the controller aims to cool down the store during the night in order to prepare it for solar loading on the following day. If the adjusted maximum store temperature (**SMX/S1MX**) is exceeded and the collector temperature falls below the store temperature, the system will be reactivated in order to cool down the store. Cooling will continue until the store temperature has fallen below the adjusted maximum store temperature (**S MX/S1MX**) again. A hysteresis of 2 K [4 °Ra] is set for the store cooling function. Reference threshold temperature differences for the store cooling function are **DTO** and **DTF**.

If no DHW consumption is expected for a longer period of time, the additional holiday cooling option **OHOL** can be activated in order to extend the store cooling function. The adjustable temperature **THOL** then replaces the maximum store temperature (**SMX/S1MX**) as the switch-off temperature for the store cooling function.

When the holiday cooling function is activated, ☼ and ⚠ (flashing) are shown on the display.

If the holiday cooling function is active, ☉, ☼ and ⚠ are displayed (flashing).

Collector minimum limitation



OCN/OCN1/OCN2

Collector minimum limitation option

Adjustment range: OFF/ON

Factory setting: OFF



CMN/CMN1/CMN2

Minimum collector temperature

Adjustment range:

10.0 ... 90.0 °C [50.0 ... 190.0 °F]

Factory setting: 10.0 °C [50.0 °F]


If the collector minimum limitation option is activated, the pump (R1/R2) will only be switched on, if the adjustable collector minimum temperature is exceeded. The minimum temperature prevents the pump from being switched on too often at low collector temperatures. A hysteresis of 5 K [10 °Ra] is set for this function. If the collector minimum limitation is active, ☼ is displayed (flashing).



Note

If **OSTC** or **OCF** is active, the collector minimum limitation will be overridden. In that case, the collector temperature may fall below **CMN**.

Antifreeze function

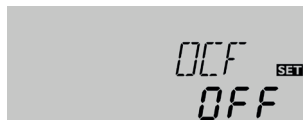

OCF/OCF1/OCF2

Antifreeze function option

Adjustment range: OFF/ON

Factory setting: OFF



CFR/CFR1/CFR2

Antifreeze temperature

Adjustment range:

-40.0 ... +10.0 °C [-40.0 ... +50.0 °F]

Factory setting: +4.0 °C [+40.0 °F]

The antifreeze function activates the loading circuit between the collector and the store when the temperature falls below the adjusted antifreeze temperature. This will protect the fluid against freezing or coagulating. If the adjusted antifreeze temperature is exceeded by 1 K [2 °Ra], the loading circuit will be deactivated.

If the antifreeze function is activated, ☼ is displayed. If the antifreeze function is active, ① and ☼ are displayed (flashing).



Note

Since this function uses the limited heat quantity of the store, the antifreeze function should only be used in regions with few days of temperatures around the freezing point.

The antifreeze function will be suppressed if the store temperature falls below +5 °C [+40 °F] in order to protect the store from frost damage.

Priority logic



Note

Priority logic can be used in 2-store system only (Arr = 4, 5, 6).



PRIO

Priority

Adjustment range: SE 1, SE 2, Su 1, Su 2, 0, 1, 2

Factory setting: Arr 4: 2, Arr 5, 6: 1

If a 2-store system has been selected, the priority logic determines how the heat is divided between the stores. Different types of priority logic are adjustable:

- spreaded loading (SE 1 and SE 2)
- successive loading (Su 1 and Su 2)
- parallel loading (0)
- store sequence control (1 and 2)

If priority **PRIO SE 1** or **SE 2** (only available in Arr 6) is adjusted, the subordinate store will be loaded in parallel to the priority store if the temperature difference between the collector and the priority store (store 1 for SE 1, store 2 for SE 2) exceeds the adjusted value **DTSE** and the subordinate store has not reached its maximum temperature.

Parallel loading will stop as soon as the temperature difference between the collector and the priority store falls by 2 K [4 °Ra] below **DTSE** or the subordinate store reaches its maximum temperature.

If priority **PRIO Su 1** or **Su 2** is adjusted, the stores are loaded successively. The subordinate store will only be loaded if the priority store (store 1 for Su 1, store 2 for Su 2) has reached its adjusted maximum temperature (**S1MX** or **S2MX**).

If priority **PRIO 0** is adjusted and the switch-on conditions for both stores are fulfilled, the stores are loaded in parallel (Arr 6) or in progressive loading (Arr 4, 5) respectively, beginning with the store with the lowest temperature. In progressive loading, solar loading will switch from one store to the other in steps of 5 K [10 °Ra] temperature difference between the stores.

If **PRIO 1/2** is adjusted, store sequence control will be activated (see below) with the corresponding store as the priority store.




Note

If the priority is set to **PRIO Su 1** or **Su 2**, solar loading of the subordinate store will be stopped at once if the temperature in the priority store (store 1 for Su 1, store 2 for Su 2) falls below the adjusted maximum temperature. If, in that case, the temperature difference between the priority store and the collector is not sufficiently high, solar loading will be stopped completely.

Spreaded loading temperature difference

(only available if **PRIO** is set to SE 1 or SE 2)



DTSE

Temperature difference spreaded loading

Adjustment range: 20 ... 90 K [40 ... 160 °Ra]

Factory setting: 40 K [70 °Ra]

Store sequence control (only available if priority is set to **PRIO** SE 1, SE 2, 1 or 2)




tLB

Loading break store sequence control

Adjustment range: 1 ... 30 min

Factory setting: 2 min

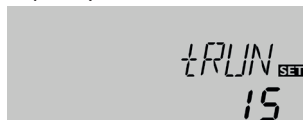

tRUN

Circulation runtime store sequence control

Adjustment range: 1 ... 30 min

Factory setting: 15 min

Store sequence control will be activated when **PRIO** is set to SE1, SE2, 1 or 2.

If the priority store cannot be loaded, the subordinate store will be checked. If useful heat can be added to the subordinate store, it will be loaded for the circulation time (**tRUN** – factory setting 15 min). After this, the loading process stops and the controller monitors the increase in collector temperature during the loading break time **tLB**. If it increases by 2 K [4° Ra], the break time timer starts again to allow the collector to gain more heat. If the collector temperature does not increase sufficiently, the subordinate store will be loaded again for the **tRUN** runtime as before.

As soon as the switch-on condition of the priority store is fulfilled, it will be loaded. If the switch-on condition of the priority store is not fulfilled, loading of the subordinate store will be continued. If the priority store reaches its maximum temperature, store sequence control will not be carried out.

If store sequence control is active and the system switches to load the priority store, the parameter **tLB** also acts as a stabilisation time, during which the switch-off condition **DTF** is ignored while the system operation is stabilising.

Tube collector function



OTC

Tube collector option

Adjustment range: OFF/ON

Factory setting: OFF



TCST

Tube collector function starting time

Adjustment range: 00:00 ... 23:45

Factory setting: 07:00

This function is used for improving the switch-on behaviour in systems with non-ideal sensor positions (e.g. with some tube collectors). This function operates within an adjusted time frame. It activates the collector circuit pump for an adjustable runtime between adjustable standstill intervals in order to compensate for the delayed temperature measurement.

If the runtime is set to more than 10 s, the pump will be run at 100% for the first 10 s of the runtime. For the remaining runtime, the pump will be run at the adjusted minimum speed. If the collector sensor is defective or the collector is blocked, this function is suppressed or switched off.


TCEN

Tube collector function ending time
Adjustment range: 00:00 ... 23:45
Factory setting: 19:00



TCIN

Tube collector function standstill interval
Adjustment range: 1 ... 60 min
Factory setting: 30 min

In system 7 both collectors are operated independently from each other by means of this function. If the store is being loaded by one collector, the other one is nevertheless operated.

**Note**

If the drainback option **ODB** is activated, **TRCU** will not be available. In that case, the runtime will be determined by the parameters **tFLL** and **tSTB**.

Grundfos Direct Sensor™ registration

GFD

Grundfos Direct Sensor™ registration
Selection: OFF, 12, 40, 40F
Factory setting: OFF
Registration of a digital flow rate sensor which can be used for heat quantity measurement.

OFF : no Grundfos Direct Sensor™

12 : VFD 1-12 (water-propylene glycol mixture only)

40 : VFD 2-40

40F : VFD 2-40 Fast (water only)


TCRU

Tube collector function runtime
Adjustment range: 5 ... 500 s
Factory setting: 30 s

Heat quantity measurement

OHQM

Heat quantity measurement option
Adjustment range: OFF/ON
Factory setting: OFF

If **OHQM** is activated, the heat quantity gained can be calculated and displayed.

The heat quantity measurement can be carried out in 2 different ways (see below): with a fixed flow rate value or with a VFD Grundfos Direct Sensor™.


Heat quantity measurement with fixed flow rate value

The heat quantity balancing (estimation) uses the difference between the flow and return temperatures and the entered flow rate (at 100 % pump speed).

1. Read the flow rate (l/min) and adjust it in the **FMAX** channel.
2. Adjust the antifreeze type and concentration of the heat transfer fluid in the channels **MEDT** and **MED%**.

**Note**

Heat quantity measurement is not possible in systems with 2 solar pumps.


FMAX

Flow rate in l/min
Adjustment range: 0.5 ... 100.0
Factory setting: 6.0

**Note**


The FMAX channel will be available only if the SEN channel has been set to OFF or if no VFD Grundfos Direct Sensor™ is activated.

Heat quantity measurement with a VFD Grundfos Direct Sensor™

Heat quantity measurement with a VFD Grundfos Direct Sensor™ is possible in all system layouts.

In order to use a VFD Grundfos Direct Sensor™ for heat quantity measurement, proceed as follows:

1. Register the VFD Grundfos Direct Sensor™ in the **GFD** channel.
2. Adjust the position of the **VFD Grundfos Direct Sensor™** in the **SEN** channel.
3. Adjust the type and concentration of the heat transfer fluid in the channels **MEDT** and **MED%**.

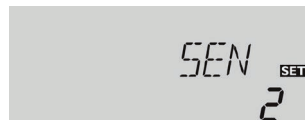

SEN

Digital flow rate sensor (only if SEN = 12, 40 or 40F)

Selection: OFF, 1, 2

Factory setting: 2

Flow rate detection type:

OFF : fixed flow rate value (flowmeter)

- 1 : Grundfos Direct Sensor™ in the flow pipe
- 2 : Grundfos Direct Sensor™ in the return pipe

Sensor allocation for heat quantity measurement:

SEN	1		2		OFF	
	Arr	SFL	SRET	SFL	SRET	SFL
1	GFD	S4	S4	GFD	S1	S4
2	---	---	S1	GFD	---	---
3	GFD	S4	S4	GFD	S1	S4
4	GFD	S4	S4	GFD	S1	S4
5	GFD	S4	S4	GFD	S1	S4
6	GFD	S4	S4	GFD	---	---
7	GFD	S4	S4	GFD	---	---
8	---	---	S1	GFD	---	---
9	---	---	S1	GFD	---	---
10	GFD	S4	S4	GFD	S1	S4



MEDT

Heat transfer fluid

Adjustment range: 0 ... 3

Factory setting: 1

Heat transfer fluid:

0 : Water

1 : Propylene glycol

2 : Ethylene glycol

3 : Tyfocor® LS/G-LS



Note

If the system 10 has been selected and **OHQM** is activated, heat quantity measurement will be interrupted when the 3-port valve switches to the heat dump. Heat quantity measurement with a VFD Grundfos Direct Sensor™ will continue independently.

Drainback option



Note

A drainback system requires additional components such as a holding tank. The drainback option should only be activated if all components required are properly installed.



Note

The drainback option is only available in system with one store and one collector (Arr 1, 2, 3, 8 and 9).

In a drainback system the heat transfer fluid will flow into a holding tank if solar loading does not take place. The drainback option initiates the filling process if solar loading is about to start. If the drainback option is activated, the following adjustment can be made.



MED%

Antifreeze concentration

in Vol-% (MED% is not indicated when MEDT 0 or 3 is used.)

Adjustment range: 20 ... 70%

Factory setting: 45 %



ODB

Drainback option

Adjustment range: OFF/ON

Factory setting: OFF



Note

If the drainback option is activated, the cooling functions and the antifreeze function will not be available. If one or more than one of these functions have been activated before, they will be deactivated again as soon as **ODB** is activated. They will remain deactivated, even if **ODB** is deactivated later on.



Note

If the drainback option **ODB** is activated, the factory settings of the parameters **nMN/n1MN**, **DTO**, **DTF** and **DS** will be adapted to values suiting drainback systems:

Additionally, the adjustment range and the factory setting of the collector emergency shutdown will change. Adjustments previously made in these channels will be overridden and have to be entered again if the drainback option is deactivated later on.

Time period – switch-on condition



tDTO

Time period – switch-on condition

Adjustment range: 1 ... 100 s

Factory setting: 60 s

The parameter **tDTO** is used for adjusting the time period during which the switch-on condition must be permanently fulfilled.

Filling time



tFLL


Filling time

Adjustment range: 1.0 ... 30.0 min

Factory setting: 5.0 min

The parameter **tFLL** is used for adjusting the filling time. During this period, the pump runs at 100% speed.

Stabilisation



tSTB

Stabilisation

Adjustment range: 1.0 ... 15.0 min

Factory setting: 2.0 min

The parameter **tSTB** is used for adjusting the time period during which the switch-off condition will be ignored after the filling time has ended.

Booster function



OBST

Booster function

Adjustment range: ON/OFF

Factory setting: OFF


This function is used for switching on a second pump when filling the solar system. When solar loading starts, R2 is energised in parallel to R1. After the filling time has elapsed, R2 switches off.



Note

The booster function is available in system 1 only. The booster function will only be available if the drainback option has been activated.

Operating mode



MAN1/MAN2

Operating mode

Adjustment range: OFF, Auto, On

Factory setting: Auto

For control and service work, the operating mode of the relays can be manually adjusted. For this purpose, select the adjustment value **MAN1** (for R1) or **MAN2** (for R2) in which the following adjustments can be made:

• MAN1/MAN2

Operating mode

OFF : Relay off Δ (flashing) + ☞

Auto : Relay in automatic operation

ON : Relay on Δ (flashing) + ☞ + ① / ②



Note

Always adjust the operating mode back to **Auto** when the control and service work is completed. Normal operation is not possible in manual mode.

Language



LANG

Language selection

Selection: dE, En, Fr, ES, It

Factory setting: dE

In this adjustment channel the menu language can be selected.

- dE : German
- En : English
- Fr : French
- ES : Spanish
- It : Italian

Unit



UNIT

Temperature unit selection

Selection: °F, °C

Factory setting: °C

In this adjustment channel, the display unit for temperatures and temperature differences can be selected. The unit can be switched between °C/K and °F/°Ra during operation.

Temperatures and temperature differences in °F and °Ra are displayed without units. If the indication is set to °C, the units are displayed with the values.

Reset



RESE


Reset function

By means of the reset function, all adjustments can be set back to their factory settings.

➔ In order to carry out a reset, press button 3

All adjustments that have previously been made will be lost! For this reason, a security enquiry will appear after the reset function has been selected.

Only confirm the security enquiry if you are sure you want to set back all adjustment to the factory setting.



Security enquiry

➔ In order to confirm the security enquiry, press button 3





Note

After a reset, the commissioning menu will start again (see page 50).

7 Troubleshooting

If a malfunction occurs, the display symbols will indicate an error code:

The symbol  is indicated on the display and the symbol  is flashing.

Sensor fault. An error code instead of a temperature is shown on the sensor display channel.

888.8

- 88.8

Cable is broken. Check the cable.

Short circuit. Check the cable.

Disconnected Pt1000 temperature sensors can be checked with an ohmmeter. Please check the resistance values correspond with the table.

°C	°F	Ω	°C	°F	Ω
-10	14	961	55	131	1213
-5	23	980	60	140	1232
0	32	1000	65	149	1252
5	41	1019	70	158	1271
10	50	1039	75	167	1290
15	59	1058	80	176	1309
20	68	1078	85	185	1328
25	77	1097	90	194	1347
30	86	1117	95	203	1366
35	95	1136	100	212	1385
40	104	1155	105	221	1404
45	113	1175	110	230	1423
50	122	1194	115	239	1442

Resistance values of Pt1000 sensors

WARNING! Electric shock!



Upon opening the housing, live parts are exposed!

→ **Always disconnect the device from power supply before opening the housing!**

The display is permanently off.



If the display is off, check the power supply of the controller. Is it disconnected?

no


yes

The fuse of the controller could be blown. The fuse holder (which holds the spare fuse) becomes accessible when the cover is removed. The fuse can then be replaced.


Check the supply line and reconnect it.

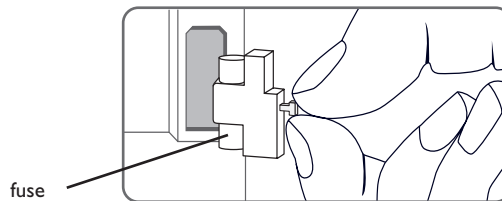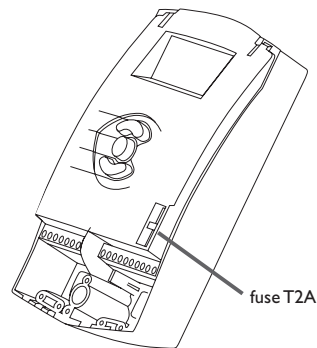


Pump is overheated, but no heat transfer from the collector to the store, flow and return have the same temperature; perhaps also bubbling in the lines.

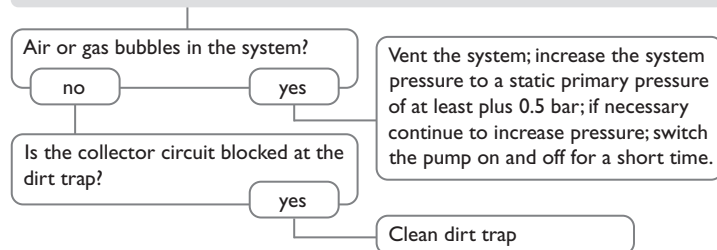


Pump starts up very late.

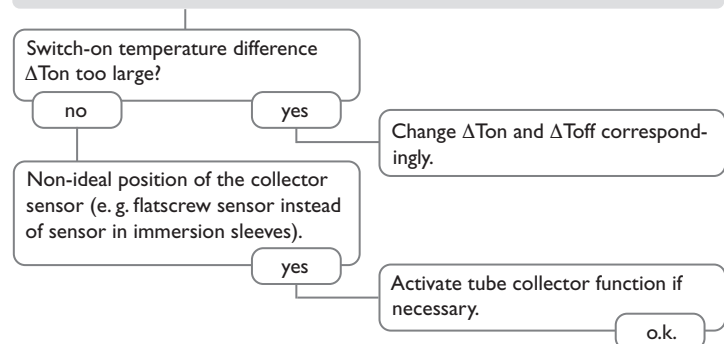

Pump starts for a short moment, switches off, switches on again, etc.

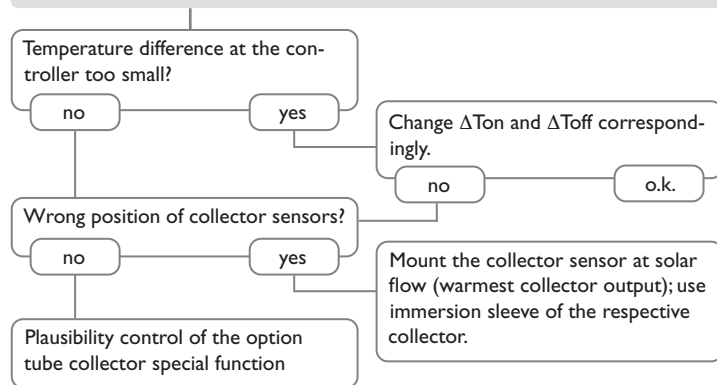

The temperature difference between store and collector increases enormously during operation; the collector circuit cannot dissipate the heat.

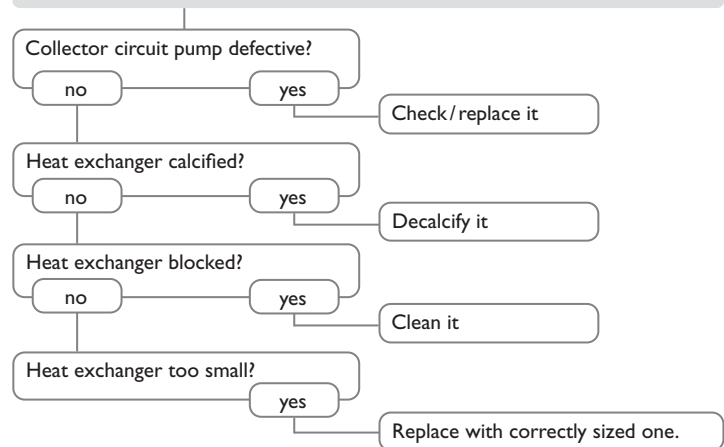

Note

For answers to frequently asked questions (FAQ) see www.resol.com.

Stores cool down at night

Collector circuit pump runs during the night?

no

yes

Check controller

Collector temperature at night is higher than the outdoor temperature.

no

yes

Check the non-return valves in the flow and the return pipe for functional efficiency.

Sufficient store insulation?

yes

no

Increase insulation.

Insulation close enough to the store?

yes

no

Replace insulation or increase it.

Are the store connections insulated?

yes

no

Insulate the connections.

Warm water outflow upwards?

no

yes

Change connection and let the water flow sideways or through a siphon (downwards); less store losses now?

no

o.k.

yes

Does the DHW circulation run for a very long time?

no

yes

Use the circulation pump with timer and switch-off thermostat (energy-efficient circulation).

Circulation pump and blocking valve should be switched off for 1 night; less store losses?

yes

no

Check whether the pumps of the after-heating circuit run at night; check whether the non-return valve is defective; problem solved?

no

a

b

a

Check the non-return valve in warm water circulation - o.k.

yes

no

The gravitation circulation in the circulation line is too strong; insert a stronger valve in the non-return valve or an electrical 2-port valve behind the circulation pump; the 2-port valve is open when the pump is activated,

b

Further pumps which are connected to the solar store must also be checked.

Clean or replace it.

otherwise it is closed; connect pump and 2-port valve electrically in parallel; activate the circulation again. Deactivate pump speed control!

The solar circuit pump does not work, although the collector is considerably warmer than the store

Is the display working?

yes

no

There is no current; check fuses / replace them and check power supply.

Does the pump start up in manual operation?

no

yes

The adjusted temperature difference for starting the pump is too high; choose a value which makes more sense.

Is the pump current enabled by the controller?

no

yes

Is the pump stuck?

yes

Controller fuse ok?

no

yes

Turn the pump shaft using a screwdriver; now passable?

no

Replace fuse

Controller might be defective - replace it.

Pump is defective - replace it.

A			
Antifreeze function	60	M	
B		Minimum collector temperature	60
Backup heating	22	Monitoring-Display	48
Booster function	64	Mounting	6
C		O	
Collector cooling	58	Operating mode	65
Collector emergency shutdown	58	P	
Commissioning	50	Priority logic	60
Cooling function	58	R	
D		Return preheating	53
Data communication / Bus	8	S	
Displays	48	Speed control	56
Drainback option	63	Spreaded loading	61
ΔT control	56	Store cooling	59
E		Store sequence control	61
Electrical connection	7	System overview	9
F		System screen	49
Flow rate	54, 62	T	
H		Technical data	5
Heat quantity measurement	62	Thermal disinfection	23
Holiday	59	Thermostat function	22
L		Time	50
Language	65	Troubleshooting	66

Software License Information (Firmware Version 3.00)

Copyright 2020 (c) Raspberry Pi (Trading) Ltd.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Optionales Zubehör | Optional accessories | Accessoires optionnels | Accesorios opcionales | Accessori opzionali:
www.resol.de/4you

Distributed by:

RESOL – Elektronische Regelungen GmbH

Heiskampstraße 10
45527 Hattingen / Germany

Tel.: +49 (0) 23 24 / 96 48 - 0

Fax: +49 (0) 23 24 / 96 48 - 755

www.resol.com
info@resol.com

Important note

The texts and drawings in this manual are correct to the best of our knowledge. As faults can never be excluded, please note:

Your own calculations and plans, under consideration of the current standards and directions should only be basis for your projects. We do not offer a guarantee for the completeness of the drawings and texts of this manual - they only represent some examples. They can only be used at your own risk. No liability is assumed for incorrect, incomplete or false information and / or the resulting damages.

Note

The design and the specifications can be changed without notice.

The illustrations may differ from the original product.

Imprint

This mounting- and operation manual including all parts is copyrighted. Another use outside the copyright requires the approval of **RESOL – Elektronische Regelungen GmbH**. This especially applies for copies, translations, micro films and the storage into electronic systems.

© **RESOL – Elektronische Regelungen GmbH**